



KR 3 AGILUS

Specification

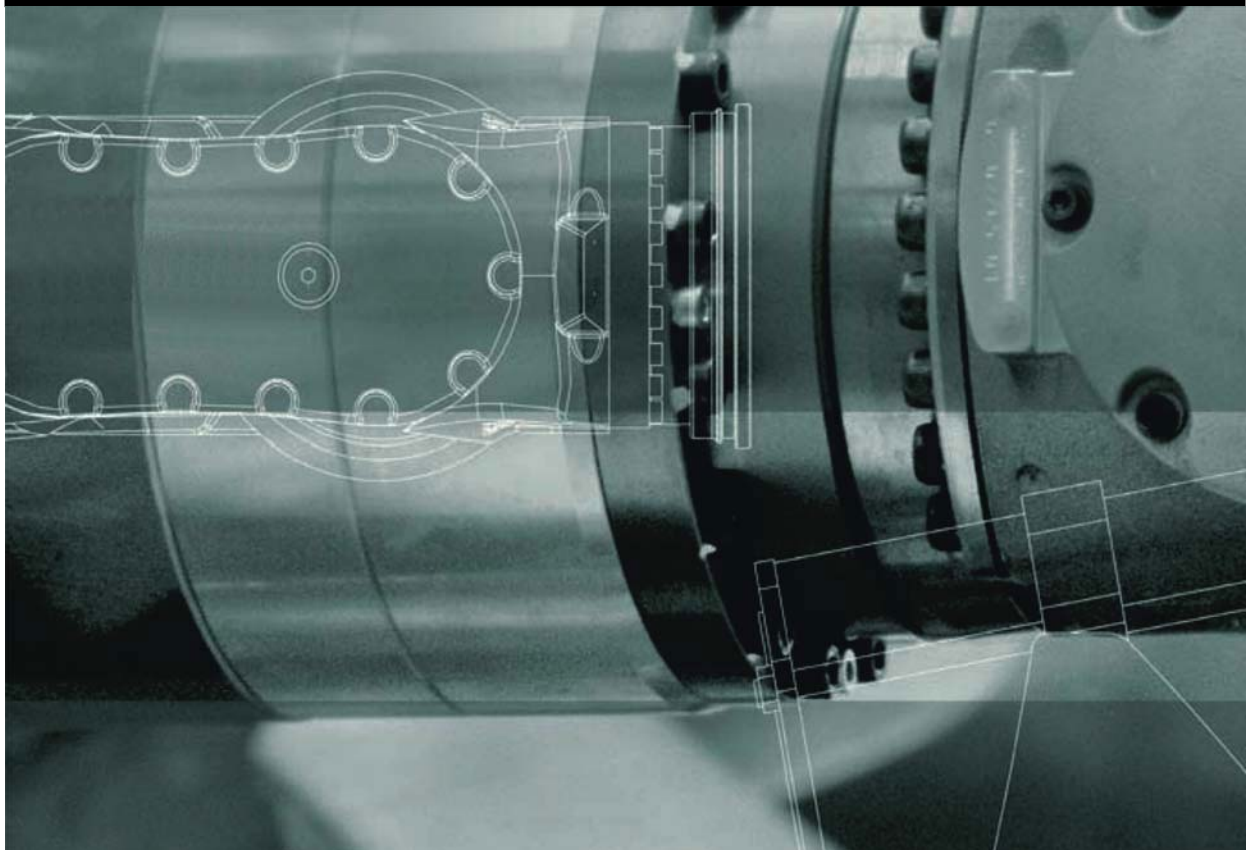

Issued: 21.03.2017

Version: Spez KR 3 AGILUS V3

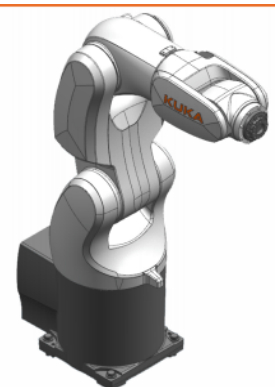

© Copyright 2017

KUKA Roboter GmbH
Zugspitzstraße 140
D-86165 Augsburg
Germany

This documentation or excerpts therefrom may not be reproduced or disclosed to third parties without the express permission of KUKA Roboter GmbH.

Other functions not described in this documentation may be operable in the controller. The user has no claims to these functions, however, in the case of a replacement or service work.

We have checked the content of this documentation for conformity with the hardware and software described. Nevertheless, discrepancies cannot be precluded, for which reason we are not able to guarantee total conformity. The information in this documentation is checked on a regular basis, however, and necessary corrections will be incorporated in the subsequent edition.

Subject to technical alterations without an effect on the function.

Translation of the original documentation

KIM-PS5-DOC

Publication:	Pub Spez KR 3 AGILUS (PDF) en
Book structure:	Spez KR 3 AGILUS V4.1
Version:	Spez KR 3 AGILUS V3

Contents

1	Introduction	5
1.1	Industrial robot documentation	5
1.2	Representation of warnings and notes	5
1.3	Terms used	5
2	Purpose	7
2.1	Target group	7
2.2	Intended use	7
3	Product description	9
3.1	Overview of the robot system	9
3.2	Description of the manipulator	9
4	Technical data	11
4.1	Technical data, KR 3 R540	11
4.1.1	Basic data, KR 3 R540	11
4.1.2	Axis data, KR 3 R540	12
4.1.3	Payloads, KR 3 R540	14
4.1.4	Foundation loads, KR 3 R540	17
4.2	Supplementary load	19
4.3	Plates and labels	19
4.4	REACH duty to communicate information acc. to Art. 33 of Regulation (EC) 1907/2006	21
4.5	Stopping distances and times	22
4.5.1	General information	22
4.5.2	Terms used	22
4.5.3	Stopping distances and times, KR 3 R540	23
4.5.3.1	Stopping distances and stopping times for STOP 0, axis 1 to axis 3	23
4.5.3.2	Stopping distances and stopping times for STOP 1, axis 1	25
4.5.3.3	Stopping distances and stopping times for STOP 1, axis 2	27
4.5.3.4	Stopping distances and stopping times for STOP 1, axis 3	29
5	Safety	31
5.1	General	31
5.1.1	Liability	31
5.1.2	Intended use of the industrial robot	32
5.1.3	EC declaration of conformity and declaration of incorporation	32
5.1.4	Terms used	33
5.2	Personnel	33
5.3	Workspace, safety zone and danger zone	34
5.4	Overview of protective equipment	35
5.4.1	Mechanical end stops	35
5.4.2	Mechanical axis limitation (optional)	35
5.4.3	Options for moving the manipulator without drive energy	35
5.4.4	Labeling on the industrial robot	36
5.5	Safety measures	36
5.5.1	General safety measures	36
5.5.2	Transportation	38
5.5.3	Start-up and recommissioning	38

5.5.4	Manual mode	39
5.5.5	Automatic mode	40
5.5.6	Maintenance and repair	40
5.5.7	Decommissioning, storage and disposal	42
5.6	Applied norms and regulations	42
6	Planning	45
6.1	Information for planning	45
6.2	Mounting base	45
6.3	Machine frame mounting	47
6.4	Connecting cables and interfaces	49
6.5	Customer interfaces	50
7	Transportation	53
7.1	Transporting the manipulator	53
8	KUKA Service	57
8.1	Requesting support	57
8.2	KUKA Customer Support	57
	Index	65

1 Introduction

1.1 Industrial robot documentation

The industrial robot documentation consists of the following parts:


- Documentation for the manipulator
- Documentation for the robot controller
- Operating and programming instructions for the System Software
- Instructions for options and accessories
- Parts catalog on storage medium


Each of these sets of instructions is a separate document.


1.2 Representation of warnings and notes

Safety


These warnings are relevant to safety and **must** be observed.

 DANGER	These warnings mean that it is certain or highly probable that death or severe injuries will occur, if no precautions are taken.
---	---

 WARNING	These warnings mean that death or severe injuries may occur, if no precautions are taken.
--	--

 CAUTION	These warnings mean that minor injuries may occur, if no precautions are taken.
--	--

NOTICE	These warnings mean that damage to property may occur, if no precautions are taken.
---------------	--

	These warnings contain references to safety-relevant information or general safety measures. These warnings do not refer to individual hazards or individual precautionary measures.
---	---


This warning draws attention to procedures which serve to prevent or remedy emergencies or malfunctions:

SAFETY INSTRUCTIONS	The following procedure must be followed exactly!
----------------------------	---

Procedures marked with this warning **must** be followed exactly.

Notices

These notices serve to make your work easier or contain references to further information.

	Tip to make your work easier or reference to further information.
---	---

1.3 Terms used

Term	Description
MEMD	Micro Electronic Mastering Device
KL	KUKA linear unit

Term	Description
micro RDC	micro Resolver Digital Converter
smartPAD	The smartPAD teach pendant has all the operator control and display functions required for operating and programming the industrial robot.

2 Purpose

2.1 Target group

This documentation is aimed at users with the following knowledge and skills:

- Advanced knowledge of mechanical engineering
- Advanced knowledge of electrical and electronic systems
- Knowledge of the robot controller system



For optimal use of our products, we recommend that our customers take part in a course of training at KUKA College. Information about the training program can be found at www.kuka.com or can be obtained directly from our subsidiaries.

2.2 Intended use

Use The industrial robot is intended for handling tools and fixtures or for processing and transferring components or products. Use is only permitted under the specified environmental conditions.

Misuse Any use or application deviating from the intended use is deemed to be misuse and is not allowed. This includes e.g.:

- Transportation of persons and animals
- Use as a climbing aid
- Operation outside the specified operating parameters
- Use in potentially explosive environments
- Operation in underground mining

NOTICE

Changing the structure of the manipulator, e.g. by drilling holes, etc., can result in damage to the components. This is considered improper use and leads to loss of guarantee and liability entitlements.

NOTICE

Deviations from the operating conditions specified in the technical data or the use of special functions or applications can lead to premature wear. KUKA Roboter GmbH must be consulted.



The robot system is an integral part of a complete system and may only be operated in a CE-compliant system.

3 Product description

3.1 Overview of the robot system

A robot system comprises all the assemblies of an industrial robot, including the manipulator (mechanical system and electrical installations), control cabinet, connecting cables, end effector (tool) and other equipment. The KR AGI-LUS sixx product family consists of the following types:

- KR 3 R540

An industrial robot of this type comprises the following components:

- Manipulator
- Robot controller
- smartPAD teach pendant
- Connecting cables
- Software
- Options, accessories

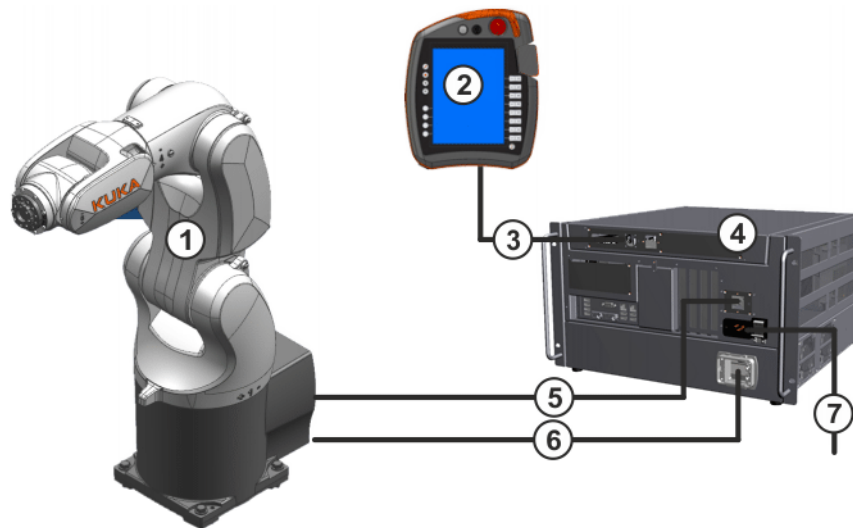


Fig. 3-1: Example of an industrial robot

- 1 Manipulator
- 2 smartPAD control panel
- 3 Connecting cable, smartPAD
- 4 Robot controller
- 5 Connecting cable, data cable
- 6 Connecting cable, motor cable
- 7 Device connection cable

3.2 Description of the manipulator

Overview

The manipulator (= robot arm and electrical installations) is designed as a 6-axis jointed-arm kinematic system made of cast light alloy. Each axis is fitted with a brake. All motor units and current-carrying cables are protected against dirt and moisture beneath screwed-on cover plates.

The manipulator consists of the following principal components:

- In-line wrist
- Arm

- Link arm
- Rotating column
- Base frame
- Electrical installations

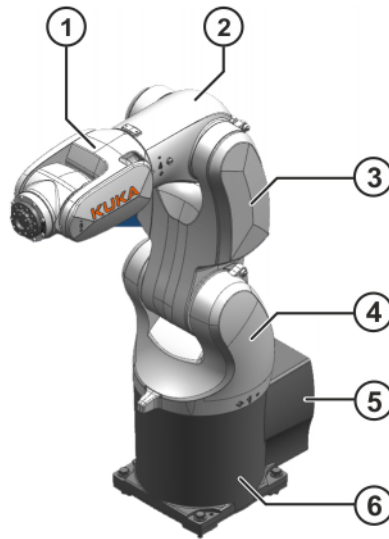


Fig. 3-2: Principal components

- | | | | |
|---|---------------|---|--------------------------|
| 1 | In-line wrist | 4 | Rotating column |
| 2 | Arm | 5 | Electrical installations |
| 3 | Link arm | 6 | Base frame |

**In-line wrist
A4, A5, A6**

The robot is fitted with a 3-axis in-line wrist. The in-line wrist consists of axes 4, 5 and 6.

Interface A4 for the energy supply system is located behind the cover of the in-line wrist.

**Arm
A3**

The arm is connected to the link arm via gear unit A3 and links the in-line wrist with the link arm.

**Link arm
A2**

The link arm is the assembly located between the arm and the rotating column. It houses motor A3 and is linked to the rotating column via gear unit A2.

**Rotating column
A1**

The rotating column houses the motor of axis 2. The rotational motion of axis 1 is performed by the rotating column. This is screwed to the base frame via the gear unit of axis 1 and is driven by motor A1 in the base frame. The link arm is also mounted in the rotating column.

Base frame

The base frame is the base of the robot. Interface A1 is located at the rear of the base frame. The connecting cable set is pre-installed with a plate at this interface between the robot and the controller.

Electrical installations

The electrical installations include all the motor and control cables for the motors of axes 1 to 6, as well as the connections for the internal energy supply system. All connections are pluggable. The electrical installations also include the micro RDC, which is integrated into the robot. The cable set of connecting cables from the robot controller is pre-installed on the base frame of the robot and contains the motor and data cables. The electrical installations also include a protective circuit.

4 Technical data

4.1 Technical data, KR 3 R540

4.1.1 Basic data, KR 3 R540

Basic data

	KR 3 R540
Number of axes	6
Number of controlled axes	6
Volume of working envelope	0.61 m ³
Pose repeatability (ISO 9283)	± 0.02 mm
Weight	approx. 26.5 kg
Rated payload	2 kg
Maximum reach	541 mm
Protection rating	IP40
Protection rating, in-line wrist	IP40
Sound level	< 68 dB (A)
Mounting position	Floor; Ceiling; Wall
Footprint	179 mm x 179 mm
Permissible angle of inclination	-
Default color	Base frame: gray aluminum (RAL 9007); Moving parts: traffic white (RAL 9016)
Controller	KR C4 compact
Transformation name	KR C4: KR3R540_C4SR_FLR

Ambient conditions

Humidity class (EN 60204)	-
Classification of environmental conditions (EN 60721-3-3)	3K3
Ambient temperature	
During operation	5 °C to 45 °C (278 K to 318 K)
During storage/transportation	-40 °C to 60 °C (233 K to 333 K)

Connecting cables

Cable designation	Connector designation robot controller - robot	Interface with robot
Motor cable	X20 - XM1/XM2-XM6	Han Yellock 30
Data cable	X21 - X15/X18	Han Q12
Ground conductor / equipotential bonding (can be ordered as an option)		Ring cable lug M4

	Cable lengths
Standard	3 m

For detailed specifications of the connecting cables, see .

4.1.2 Axis data, KR 3 R540

Axis data

Motion range	
A1	±170 °
A2	-170 ° / 50 °
A3	-110 ° / 155 °
A4	±175 °
A5	±120 °
A6	±350 °
Speed with rated payload	
A1	530 °/s
A2	529 °/s
A3	538 °/s
A4	600 °/s
A5	600 °/s
A6	800 °/s

The direction of motion and the arrangement of the individual axes may be noted from the diagram (>>> Fig. 4-1).

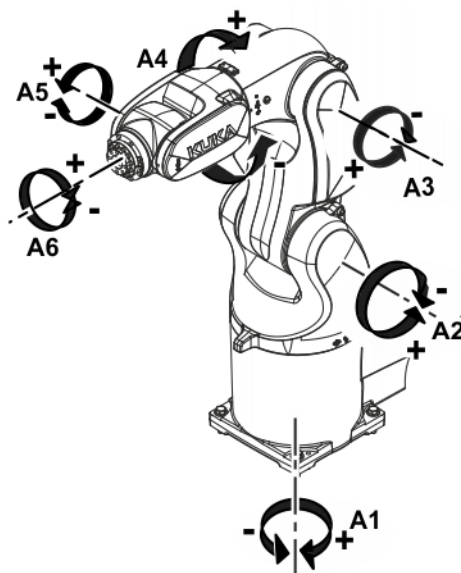


Fig. 4-1: Direction of rotation of robot axes

Mastering position

Mastering position	
A1	0 °
A2	-90 °
A3	90 °
A4	80 °
A5	0 °
A6	0 °

Workspace

The following diagrams (>>> Fig. 4-2) and (>>> Fig. 4-3) show the load center of gravity, shape and size of the working envelope.

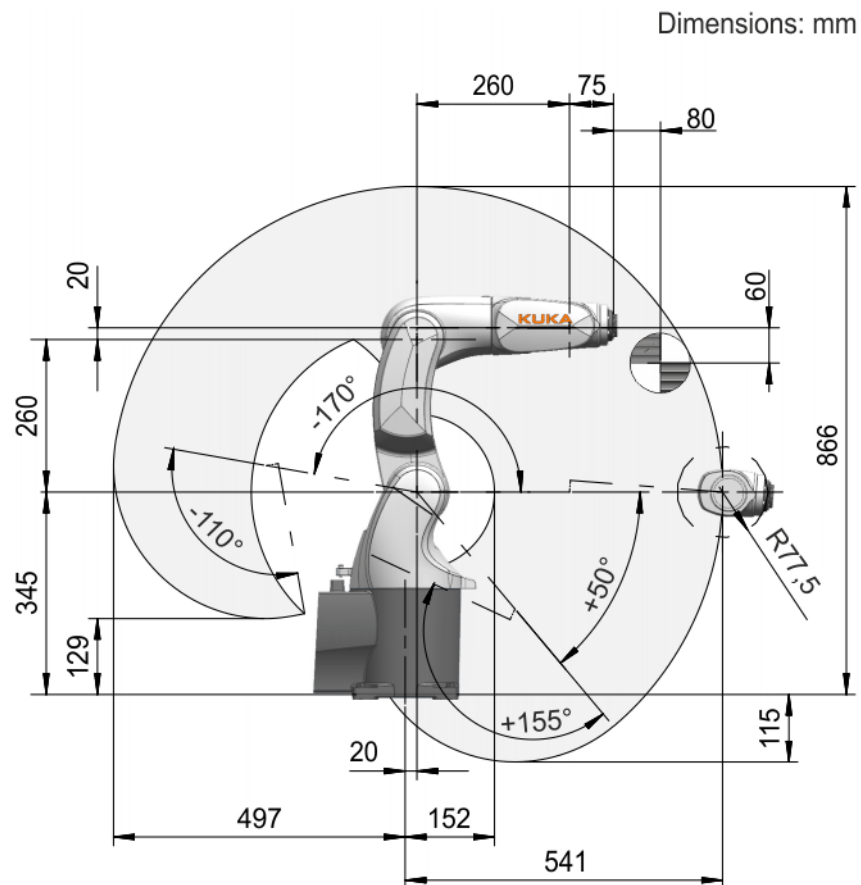


Fig. 4-2: KR 3 R540 working envelope, side view

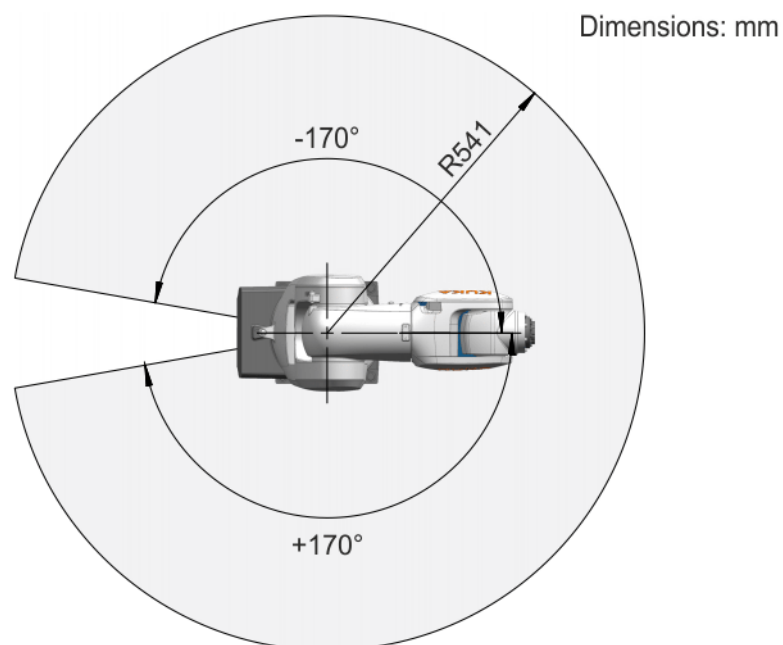


Fig. 4-3: KR 3 R540 working envelope, top view

Inclined installation

The robot can be installed anywhere from a 0° position (floor) to a 180° position (ceiling). The following figure shows the possible limitation of the motion range of axis 1, as a function of the angle of inclination of the robot.

The inclination angles for the robot must be entered correctly into the controller if the robot is not operated in the floor-mounted position. Configuration of the angles is possible via WorkVisual.

The inclination angles for an unchanged main working direction of the robot:

Floor: A:0°, B:0°, C:0°

Wall: A:0°, B:90°, C:0°

Ceiling: A:0°, B:0°, C:180°

CAUTION The inclined installation angles must be individually checked and entered. An incorrectly entered inclined installation angle can lead to unforeseen motion and/or to an overload and, potentially, damage to the robot.

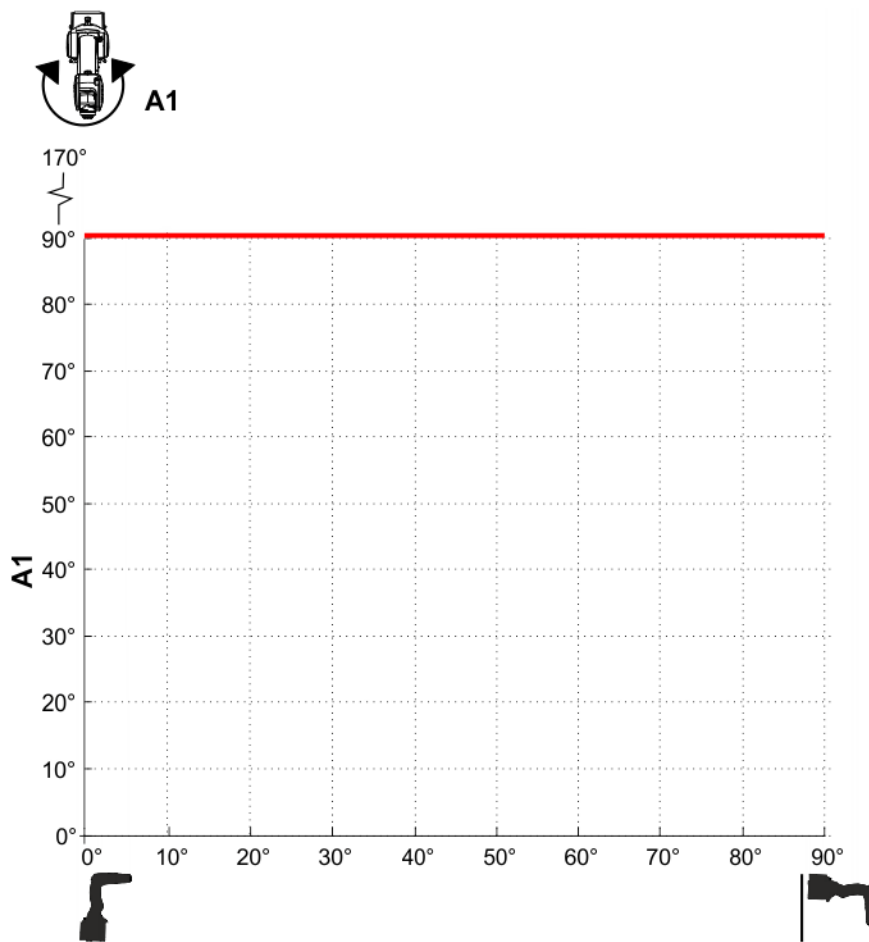


Fig. 4-4: Motion range, axis 1 inclined

4.1.3 Payloads, KR 3 R540

Payloads

Rated payload	2 kg
Maximum payload	3 kg
Rated mass moment of inertia	0.045 kgm ²
Rated supplementary load, base frame	0 kg
Maximum supplementary load, base frame	0 kg
Rated supplementary load, rotating column	0 kg
Maximum supplementary load, rotating column	0 kg
Rated supplementary load, link arm	0 kg

Maximum supplementary load, link arm	0 kg
Rated supplementary load, arm	0 kg
Maximum supplementary load, arm	0 kg
Maximum total load	3 kg
Nominal distance to load center of gravity	
Lxy	60 mm
Lz	80 mm



The sum of all loads mounted on the robot must not exceed the maximum total load.

Load center of gravity

For all payloads, the load center of gravity refers to the distance from the face of the mounting flange on axis 6. Refer to the payload diagram for the nominal distance.

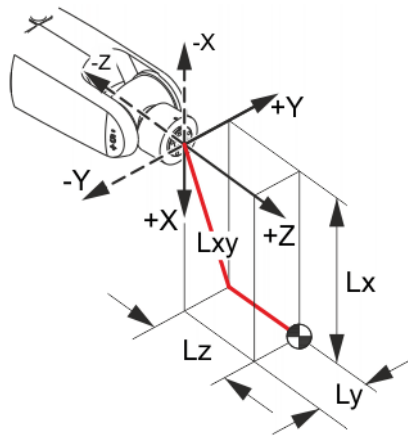


Fig. 4-5: Load center of gravity

Payload diagram

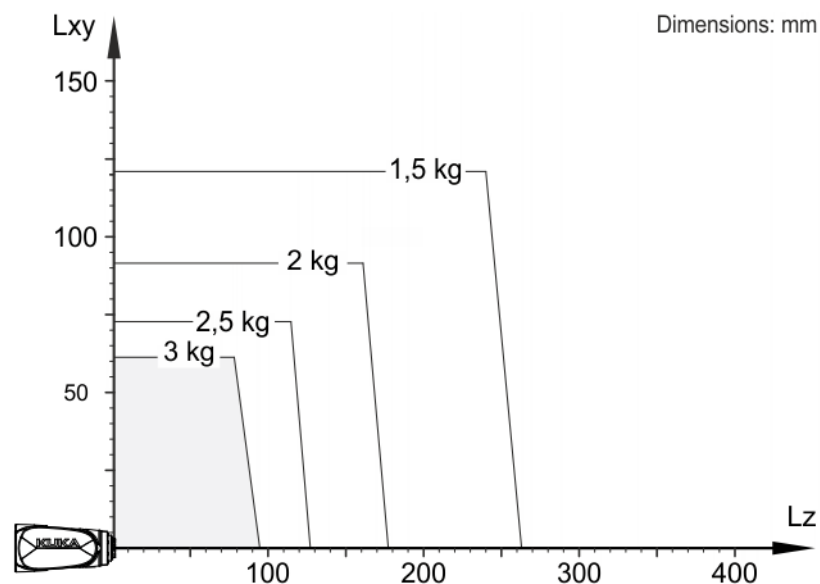


Fig. 4-6: KR 3 AGILUS Payload diagram, payload 3 kg

NOTICE This loading curve corresponds to the maximum load capacity. Both values (payload and mass moment of inertia) must be checked in all cases. Exceeding this capacity will reduce the service life of the robot and overload the motors and the gears; in any such case KUKA Roboter GmbH must be consulted beforehand. The values determined here are necessary for planning the robot application. For commissioning the robot, additional input data are required in accordance with the operating and programming instructions of the KUKA System Software. The mass inertia must be verified using KUKA.Load. It is imperative for the load data to be entered in the robot controller!

In-line wrist

In-line wrist type	ZH3
Mounting flange	see drawing

Mounting flange

Mounting flange (hole circle)	31.5 mm
Screw grade	12.9
Screw size	M5
Number of fastening screws	7
Clamping length	min. 1.5 x nominal diameter
Depth of engagement	min. 5.5 mm, max. 7 mm
Locating element	5 H7
Standard	See diagram.

The mounting flange is depicted with axis 6 in the zero position (>>> Fig. 4-7) The symbol X_m indicates the position of the locating element in the zero position.

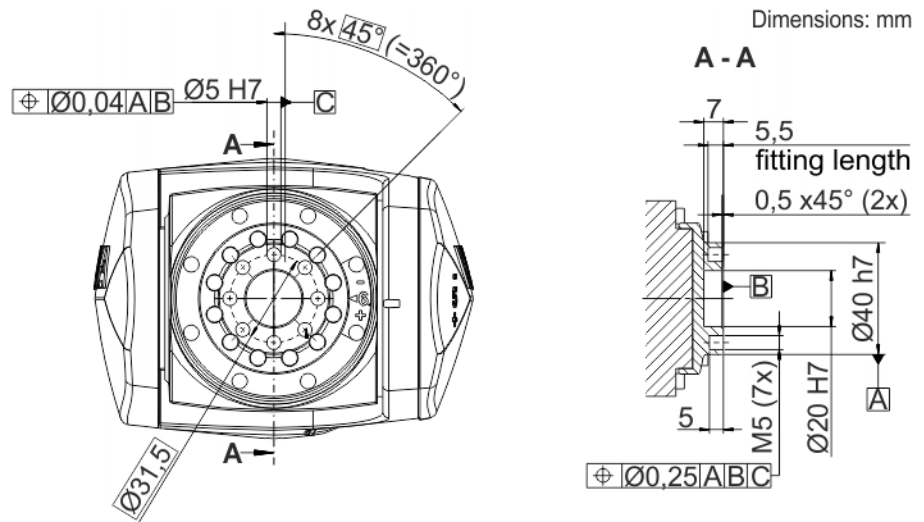


Fig. 4-7: Mounting flange

Flange loads

Due to the motion of the payload (e.g. tool) mounted on the robot, forces and torques act on the mounting flange. These forces and torques depend on the motion profile as well as the mass, load center of gravity and mass moment of inertia of the payload.

The specified values refer to nominal payloads at the nominal distance and do not include safety factors. It is imperative for the load data to be entered in the robot controller. The robot controller takes the payload into consideration during path planning. A reduced payload does not necessarily result in lower forces and torques.

The values are guide values determined by means of trial and simulation and refer to the most heavily loaded machine in the robot family. The actual forces and torques may differ due to internal and external influences on the mounting flange or a different point of application. It is therefore advisable to determine the exact forces and torques where necessary on site under the real conditions of the actual robot application.

The operating values may occur permanently in the normal motion profile. It is advisable to rate the tool for its fatigue strength.

The EMERGENCY STOP values may arise in the event of an Emergency Stop situation of the robot. As these should only occur very rarely during the service life of the robot, a static strength verification is usually sufficient.

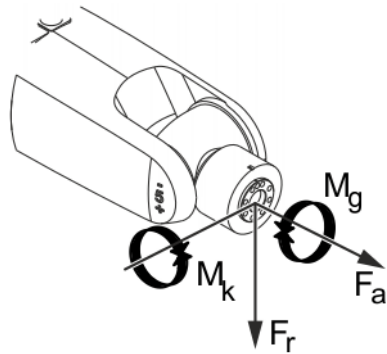


Fig. 4-8: Flange loads

Flange loads during operation	
F(a)	194 N
F(r)	144 N
M(k)	21 Nm
M(g)	9 Nm
Flange loads in the case of EMERGENCY STOP	
F(a)	244 N
F(r)	263 N
M(k)	35 Nm
M(g)	19 Nm

Axial force F(a), radial force F(r), tilting torque M(k), torque about mounting flange M(g)

4.1.4 Foundation loads, KR 3 R540

Mounting base loads

The specified forces and moments already include the maximum payload and the inertia force (weight) of the robot.

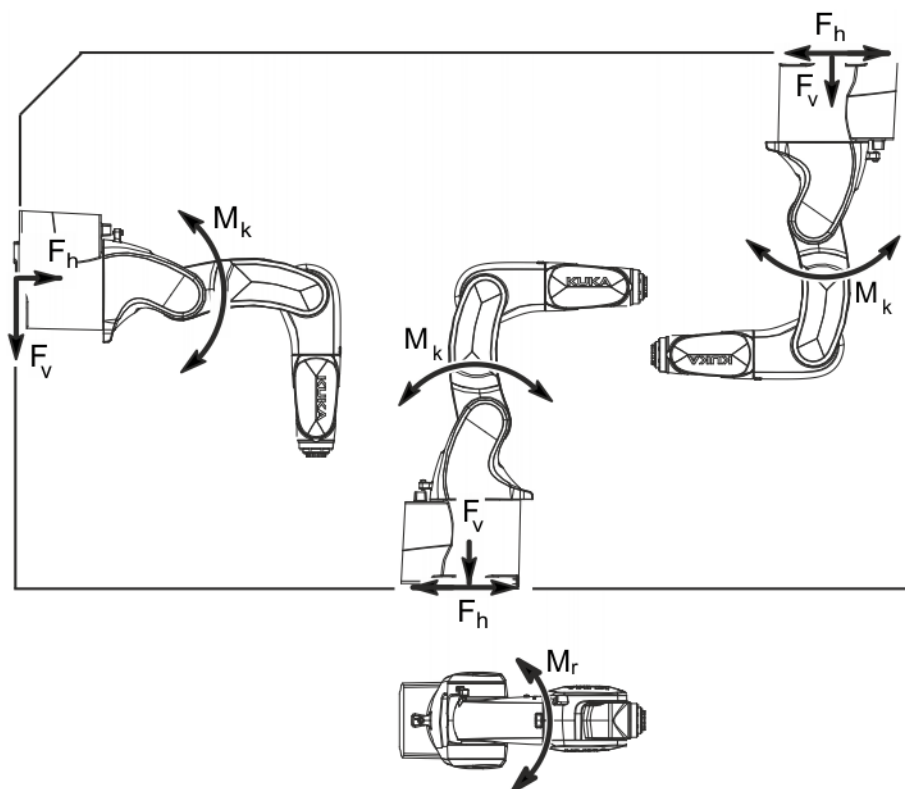


Fig. 4-9: Mounting base loads

Foundation loads for floor mounting position	
F(v normal)	507 N
F(v max)	713 N
F(h normal)	489 N
F(h max)	723 N
M(k normal)	272 Nm
M(k max)	406 Nm
M(r normal)	100 Nm
M(r max)	203 Nm
Foundation loads for ceiling mounting position	
F(v normal)	610 N
F(v max)	732 N
F(h normal)	418 N
F(h max)	568 N
M(k normal)	268 Nm
M(k max)	402 Nm
M(r normal)	103 Nm
M(r max)	183 Nm
Foundation loads for wall mounting position	
F(v normal)	297 N
F(v max)	419 N
F(h normal)	611 N
F(h max)	797 N
M(k normal)	267 Nm
M(k max)	404 Nm

M(r normal)	96 Nm
M(r max)	165 Nm

Vertical force $F(v)$, horizontal force $F(h)$, tilting torque $M(k)$, torque about axis 1 $M(r)$

⚠ WARNING Normal loads and maximum loads for the foundations are specified in the table. The maximum loads must be referred to when dimensioning the foundations and must be adhered to for safety reasons. Failure to observe this can result in personal injury and damage to property. The normal loads are average expected foundation loads. The actual loads are dependent on the program and on the robot loads and may therefore be greater or less than the normal loads. The supplementary loads (A1 and A2) are not taken into consideration in the calculation of the mounting base load. These supplementary loads must be taken into consideration for F_v .

4.2 Supplementary load

Description

The robot can carry supplementary loads on the arm. The holes are used for fastening the covers or external energy supply systems. When mounting the supplementary loads, be careful to observe the maximum permissible total load. The dimensions and positions of the installation options can be seen in the following diagrams.

⚠ The sum of all loads mounted on the robot must not exceed the maximum total load.

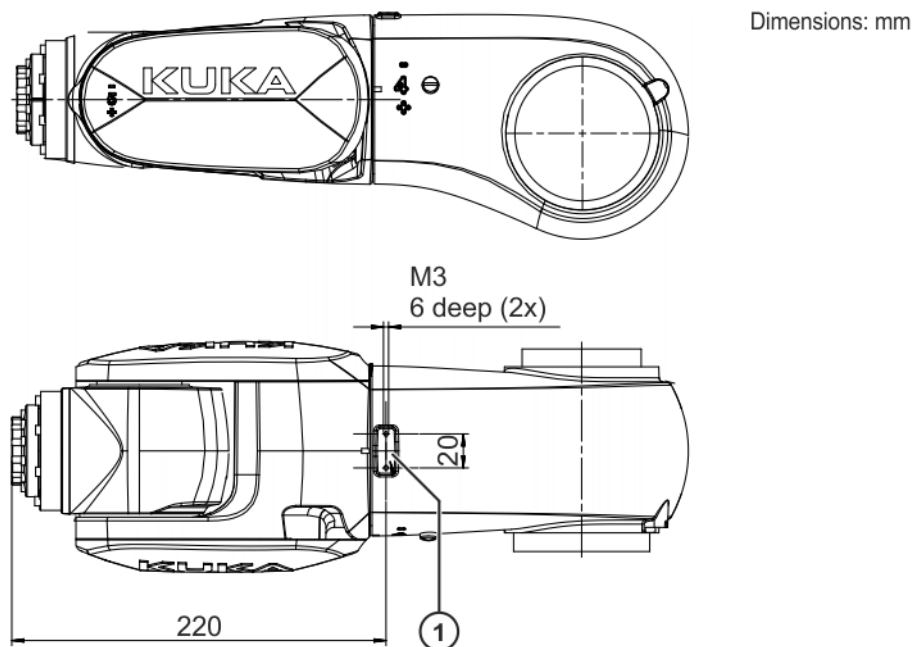


Fig. 4-10: Supplementary load, arm

- 1 Support bracket for supplementary load

4.3 Plates and labels

Plates and labels The following plates and labels are attached to the robot. They must not be removed or rendered illegible. Illegible plates and labels must be replaced.






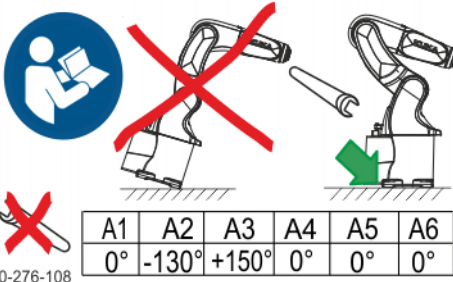

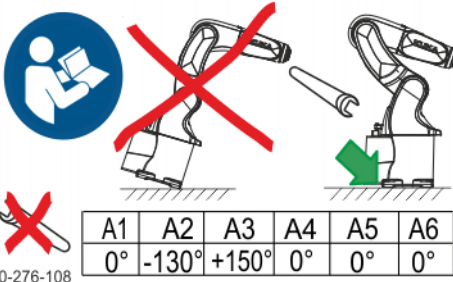




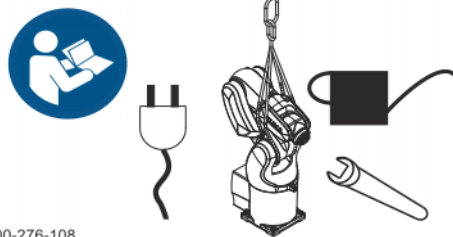

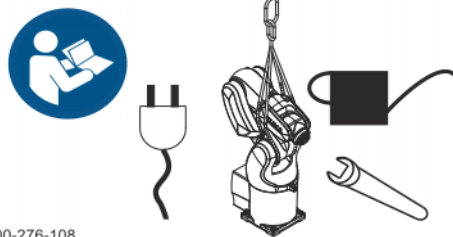
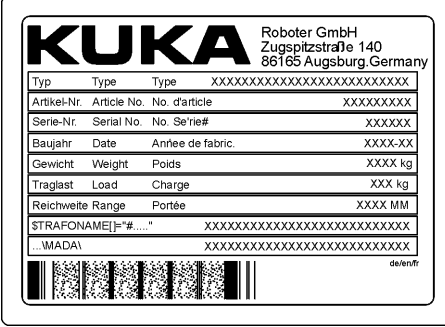


Fig. 4-11: Plates and labels

Item	Description																				
1	 <p>Secure the axes Before exchanging any motor, secure the corresponding axis through safeguarding by suitable means/devices to protect against possible movement. The axis can move. Risk of crushing!</p>																				
2	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td data-bbox="646 1232 941 1523" style="text-align: center;">  </td> <td data-bbox="941 1232 1428 1523">  <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <tr> <td>A1</td> <td>A2</td> <td>A3</td> <td>A4</td> <td>A5</td> <td>A6</td> </tr> <tr> <td>0°</td> <td>-130°</td> <td>+150°</td> <td>0°</td> <td>0°</td> <td>0°</td> </tr> </table> <p style="font-size: small; margin-top: 5px;">00-276-108</p> </td> </tr> <tr> <td style="background-color: yellow; text-align: center;">⚠ CAUTION</td> <td>Move the robot into its transport position before removing the mounting base!</td> </tr> <tr> <td style="background-color: yellow; text-align: center;">⚠ ATTENTION</td> <td>Amener le robot en position de transport avant de défaire la fixation aux fondations!</td> </tr> <tr> <td style="background-color: yellow; text-align: center;">⚠ VORSICHT</td> <td>Roboter vor Lösen der Fundamentbefestigung in Transportstellung bringen!</td> </tr> </table> <p>Transport position Before loosening the bolts of the mounting base, the robot must be in the transport position as indicated in the table. Risk of toppling!</p>		 <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <tr> <td>A1</td> <td>A2</td> <td>A3</td> <td>A4</td> <td>A5</td> <td>A6</td> </tr> <tr> <td>0°</td> <td>-130°</td> <td>+150°</td> <td>0°</td> <td>0°</td> <td>0°</td> </tr> </table> <p style="font-size: small; margin-top: 5px;">00-276-108</p>	A1	A2	A3	A4	A5	A6	0°	-130°	+150°	0°	0°	0°	⚠ CAUTION	Move the robot into its transport position before removing the mounting base!	⚠ ATTENTION	Amener le robot en position de transport avant de défaire la fixation aux fondations!	⚠ VORSICHT	Roboter vor Lösen der Fundamentbefestigung in Transportstellung bringen!
	 <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <tr> <td>A1</td> <td>A2</td> <td>A3</td> <td>A4</td> <td>A5</td> <td>A6</td> </tr> <tr> <td>0°</td> <td>-130°</td> <td>+150°</td> <td>0°</td> <td>0°</td> <td>0°</td> </tr> </table> <p style="font-size: small; margin-top: 5px;">00-276-108</p>	A1	A2	A3	A4	A5	A6	0°	-130°	+150°	0°	0°	0°								
A1	A2	A3	A4	A5	A6																
0°	-130°	+150°	0°	0°	0°																
⚠ CAUTION	Move the robot into its transport position before removing the mounting base!																				
⚠ ATTENTION	Amener le robot en position de transport avant de défaire la fixation aux fondations!																				
⚠ VORSICHT	Roboter vor Lösen der Fundamentbefestigung in Transportstellung bringen!																				

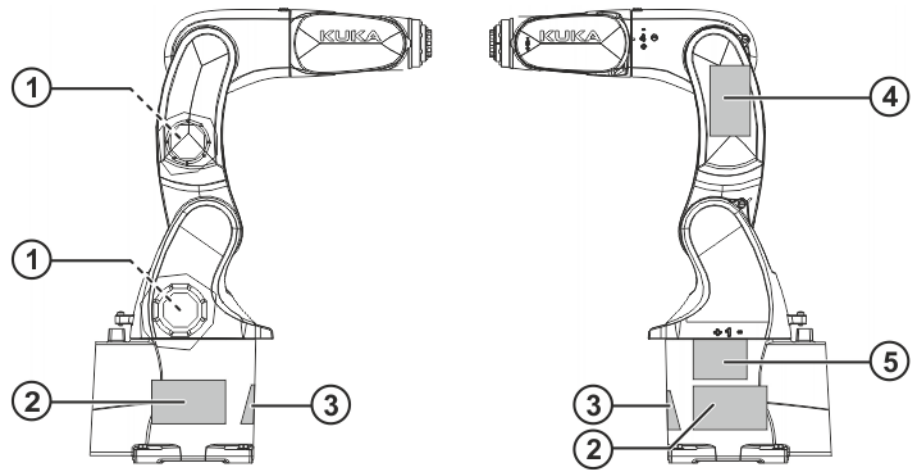Item	Description								
3	 <p>Danger zone Entering the danger zone of the robot is prohibited if the robot is in operation or ready for operation. Risk of injury!</p>								
4	<table border="1" data-bbox="534 672 1308 1108"> <tr> <td data-bbox="534 672 821 929">  </td> <td data-bbox="821 672 1308 929">  <p>00-276-108</p> </td> </tr> <tr> <td data-bbox="534 929 821 981"> <p>⚠ CAUTION</p> </td> <td data-bbox="821 929 1308 981"> <p>Secure the system before beginning work on the robot. Read and observe the safety instructions!</p> </td> </tr> <tr> <td data-bbox="534 981 821 1048"> <p>⚠ ATTENTION</p> </td> <td data-bbox="821 981 1308 1048"> <p>Bloquer le système avant d'effectuer des travaux sur le robot. Lire et respecter les remarques relatives à la sécurité!</p> </td> </tr> <tr> <td data-bbox="534 1048 821 1108"> <p>⚠ VORSICHT</p> </td> <td data-bbox="821 1048 1308 1108"> <p>Vor Arbeiten am Roboter, System sichern. Sicherheitshinweise lesen und beachten!</p> </td> </tr> </table> <p>Work on the robot Before start-up, transportation or maintenance, read and follow the assembly and operating instructions.</p>		 <p>00-276-108</p>	<p>⚠ CAUTION</p>	<p>Secure the system before beginning work on the robot. Read and observe the safety instructions!</p>	<p>⚠ ATTENTION</p>	<p>Bloquer le système avant d'effectuer des travaux sur le robot. Lire et respecter les remarques relatives à la sécurité!</p>	<p>⚠ VORSICHT</p>	<p>Vor Arbeiten am Roboter, System sichern. Sicherheitshinweise lesen und beachten!</p>
	 <p>00-276-108</p>								
<p>⚠ CAUTION</p>	<p>Secure the system before beginning work on the robot. Read and observe the safety instructions!</p>								
<p>⚠ ATTENTION</p>	<p>Bloquer le système avant d'effectuer des travaux sur le robot. Lire et respecter les remarques relatives à la sécurité!</p>								
<p>⚠ VORSICHT</p>	<p>Vor Arbeiten am Roboter, System sichern. Sicherheitshinweise lesen und beachten!</p>								
5	 <p>Identification plate Content according to Machinery Directive.</p>								

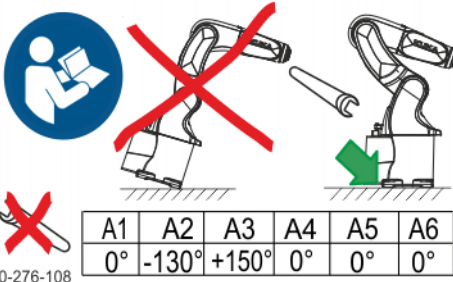4.4 REACH duty to communicate information acc. to Art. 33 of Regulation (EC) 1907/2006

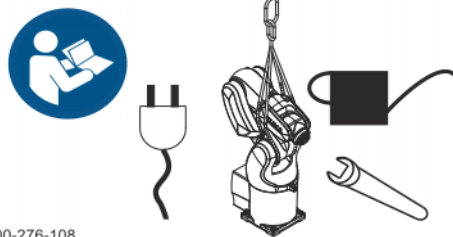On the basis of the information provided by our suppliers, this product and its components contain no substances included on the "Candidate List" of Substances of Very High Concern (SVHCs) in a concentration exceeding 0.1 per cent by mass.

4.5 Stopping distances and times

4.5.1 General information

Information concerning the data:

- The stopping distance is the angle traveled by the robot from the moment the stop signal is triggered until the robot comes to a complete standstill.
- The stopping time is the time that elapses from the moment the stop signal is triggered until the robot comes to a complete standstill.
- The data are given for the main axes A1, A2 and A3. The main axes are the axes with the greatest deflection.
- Superposed axis motions can result in longer stopping distances.
- Stopping distances and stopping times in accordance with DIN EN ISO 10218-1, Annex B.
- Stop categories:
 - Stop category 0 » STOP 0
 - Stop category 1 » STOP 1 according to IEC 60204-1
- The values specified for Stop 0 are guide values determined by means of tests and simulation. They are average values which conform to the requirements of DIN EN ISO 10218-1. The actual stopping distances and stopping times may differ due to internal and external influences on the braking torque. It is therefore advisable to determine the exact stopping distances and stopping times where necessary under the real conditions of the actual robot application.
- Measuring technique
The stopping distances were measured using the robot-internal measuring technique.
- The wear on the brakes varies depending on the operating mode, robot application and the number of STOP 0 stops triggered. It is therefore advisable to check the stopping distance at least once a year.

4.5.2 Terms used

Term	Description
m	Mass of the rated load and the supplementary load on the arm.
Phi	Angle of rotation (°) about the corresponding axis. This value can be entered in the controller via the KCP/smartPAD and can be displayed on the KCP/smartPAD.
POV	Program override (%) = velocity of the robot motion. This value can be entered in the controller via the KCP/smartPAD and can be displayed on the KCP/smartPAD.
Extension	Distance (l in %) (>>> Fig. 4-12) between axis 1 and the intersection of axes 4 and 5. With parallelogram robots, the distance between axis 1 and the intersection of axis 6 and the mounting flange.

Term	Description
KCP	KUKA Control Panel Teach pendant for the KR C2/KR C2 edition2005 The KCP has all the operator control and display functions required for operating and programming the industrial robot.
smartPAD	Teach pendant for the KR C4 The smartPAD has all the operator control and display functions required for operating and programming the industrial robot.

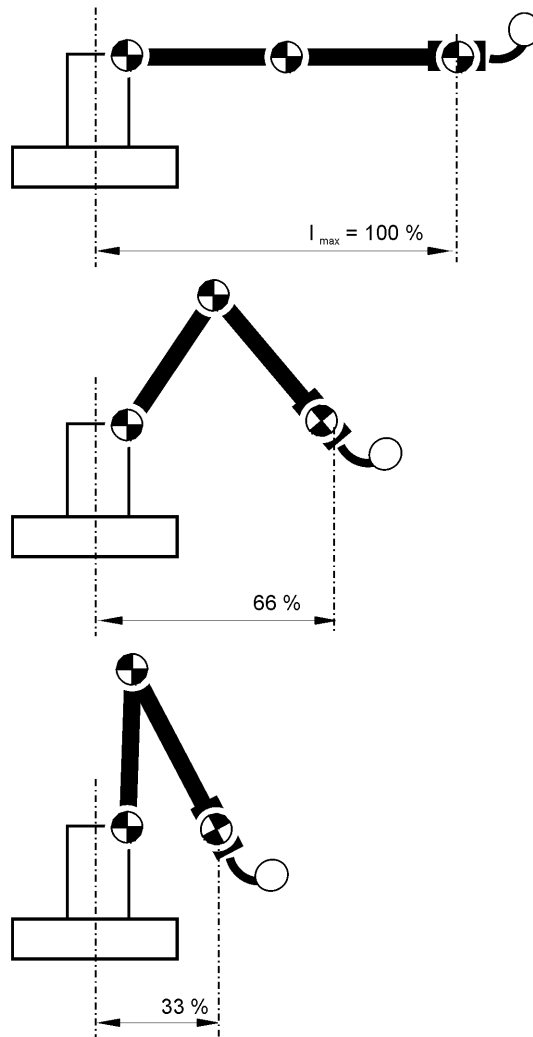


Fig. 4-12: Extension

4.5.3 Stopping distances and times, KR 3 R540

4.5.3.1 Stopping distances and stopping times for STOP 0, axis 1 to axis 3

The table shows the stopping distances and stopping times after a STOP 0 (category 0 stop) is triggered. The values refer to the following configuration:

- Extension $I = 100\%$
- Program override POV = 100%

- Mass m = maximum load (rated load + supplementary load on arm)

	Stopping distance (°)	Stopping time (s)
Axis 1	49.12	0.15
Axis 2	54.73	0.19
Axis 3	86.99	0.24

4.5.3.2 Stopping distances and stopping times for STOP 1, axis 1

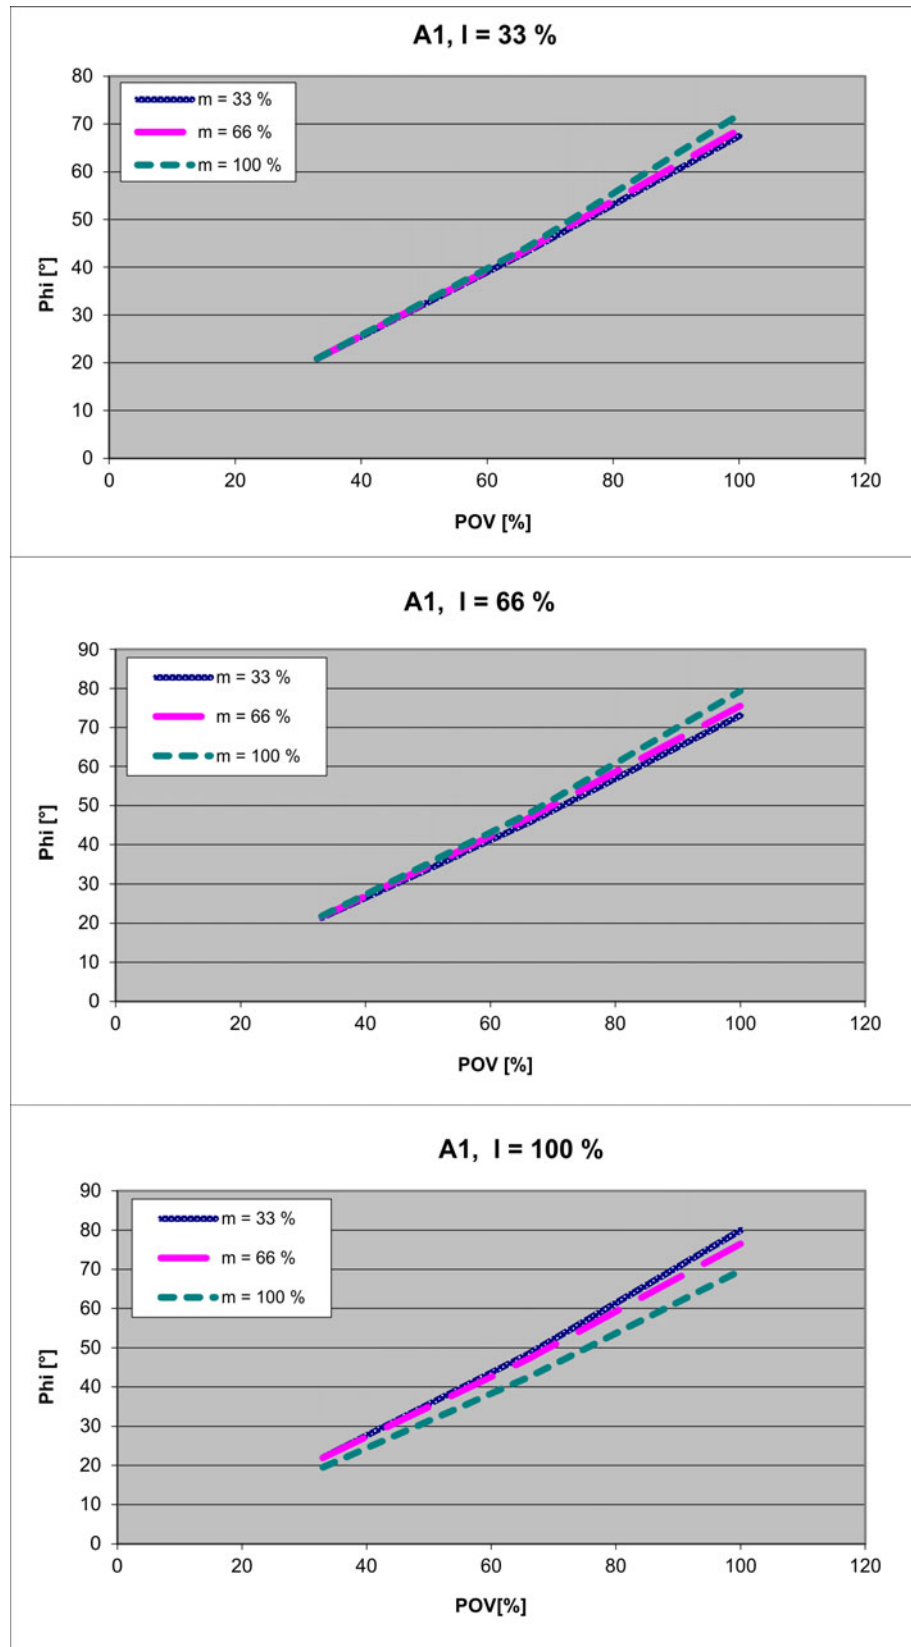


Fig. 4-13: Stopping distances for STOP 1, axis 1

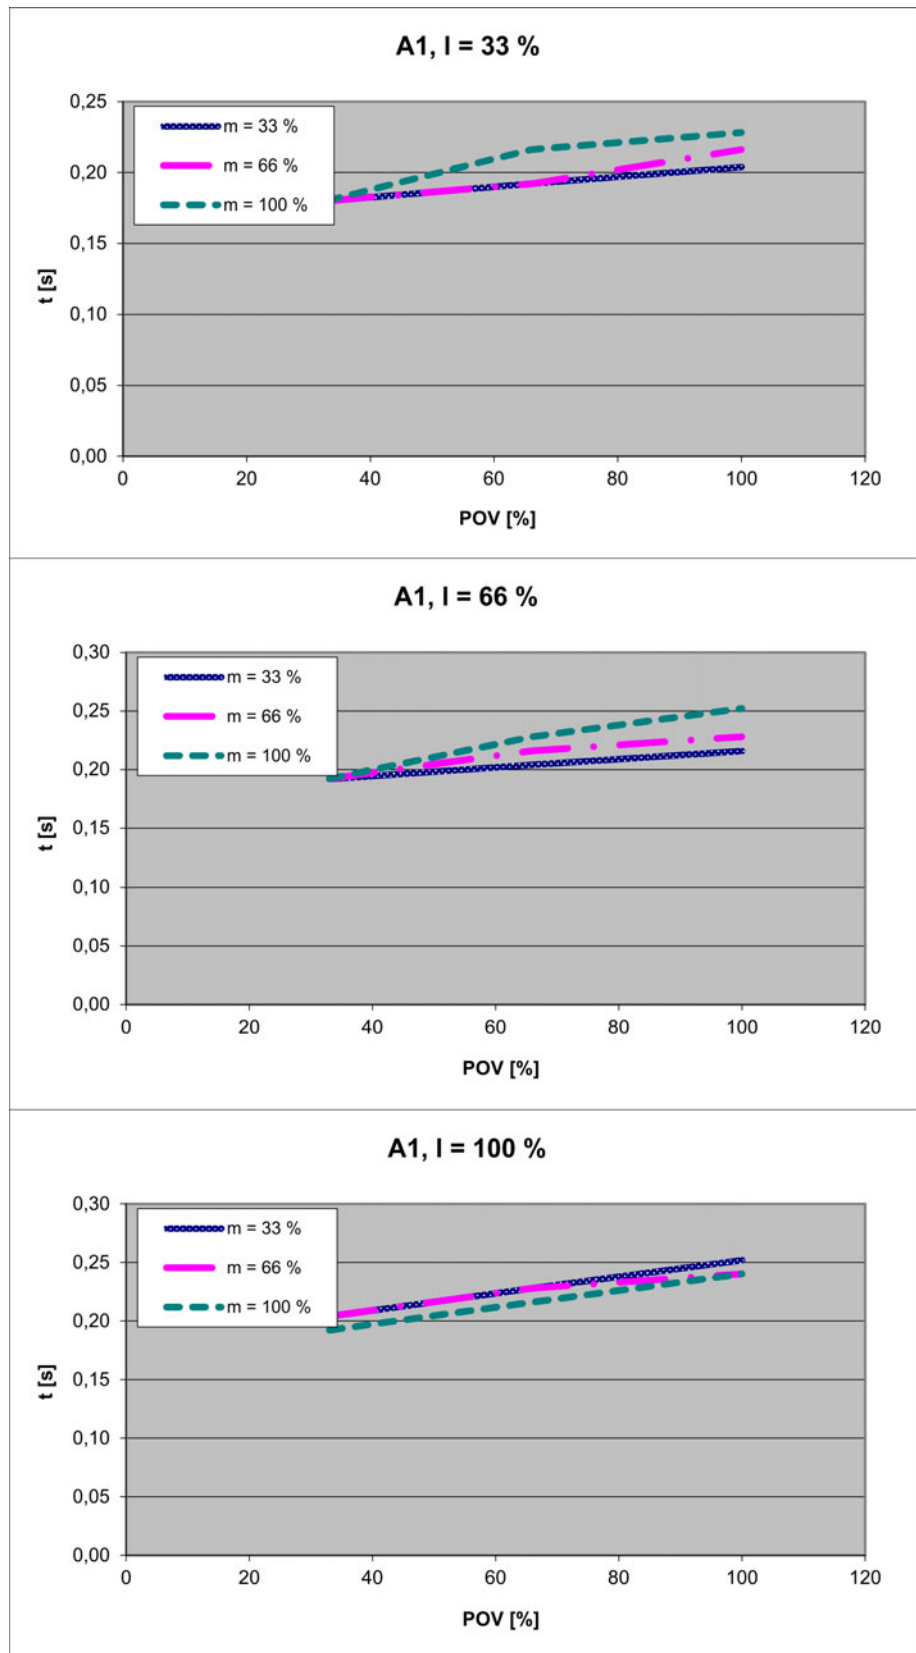


Fig. 4-14: Stopping times for STOP 1, axis 1

4.5.3.3 Stopping distances and stopping times for STOP 1, axis 2

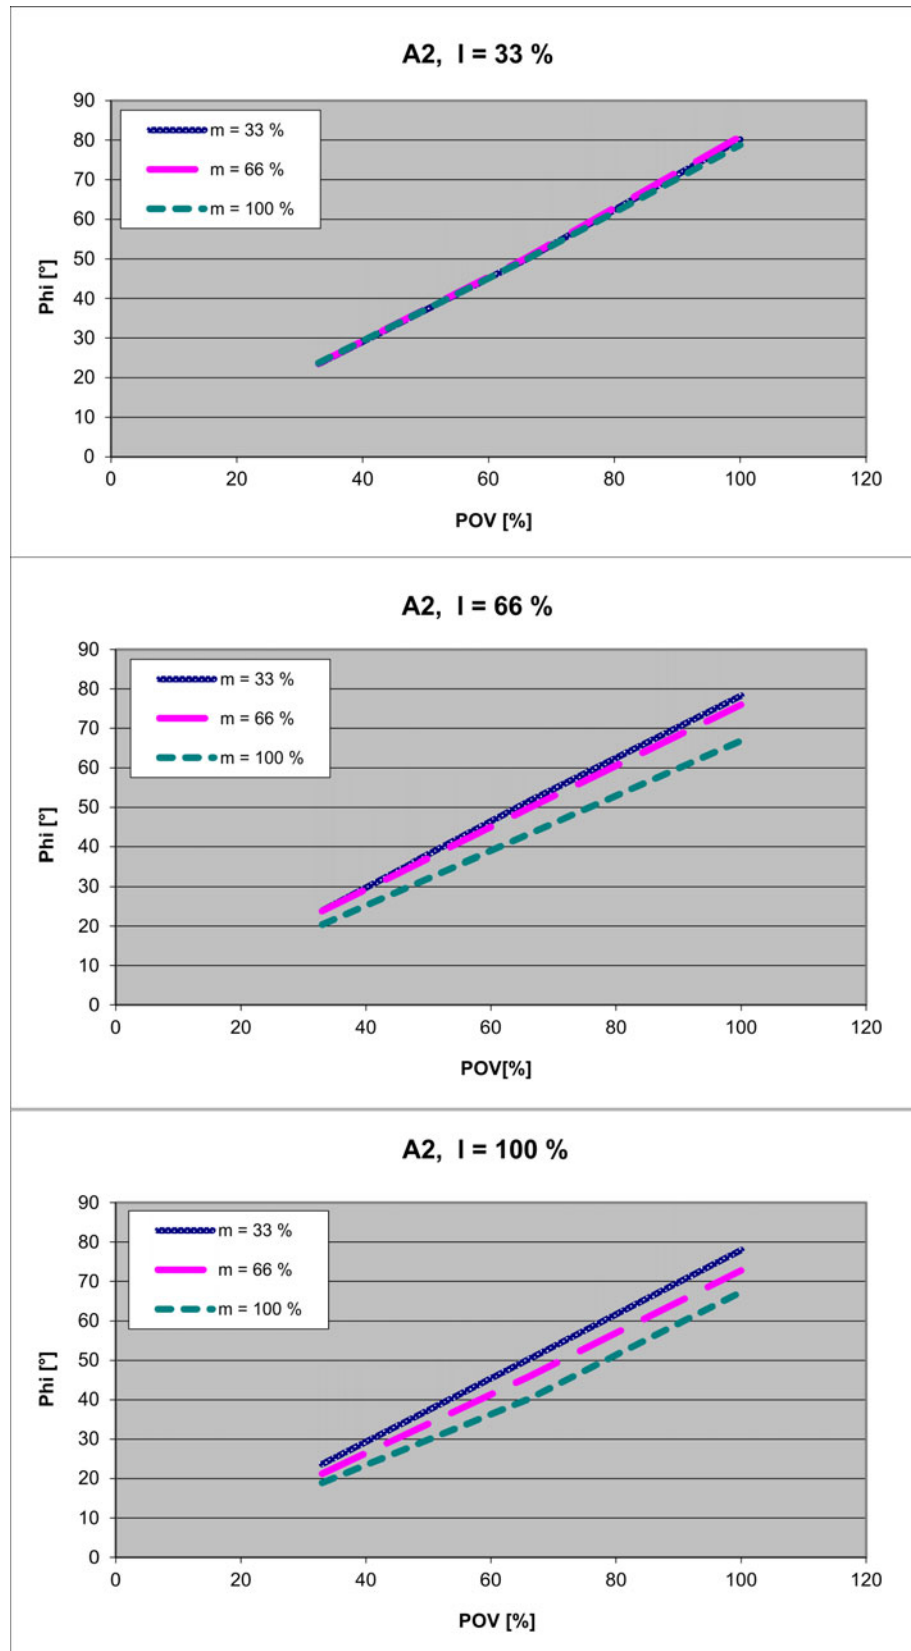


Fig. 4-15: Stopping distances for STOP 1, axis 2

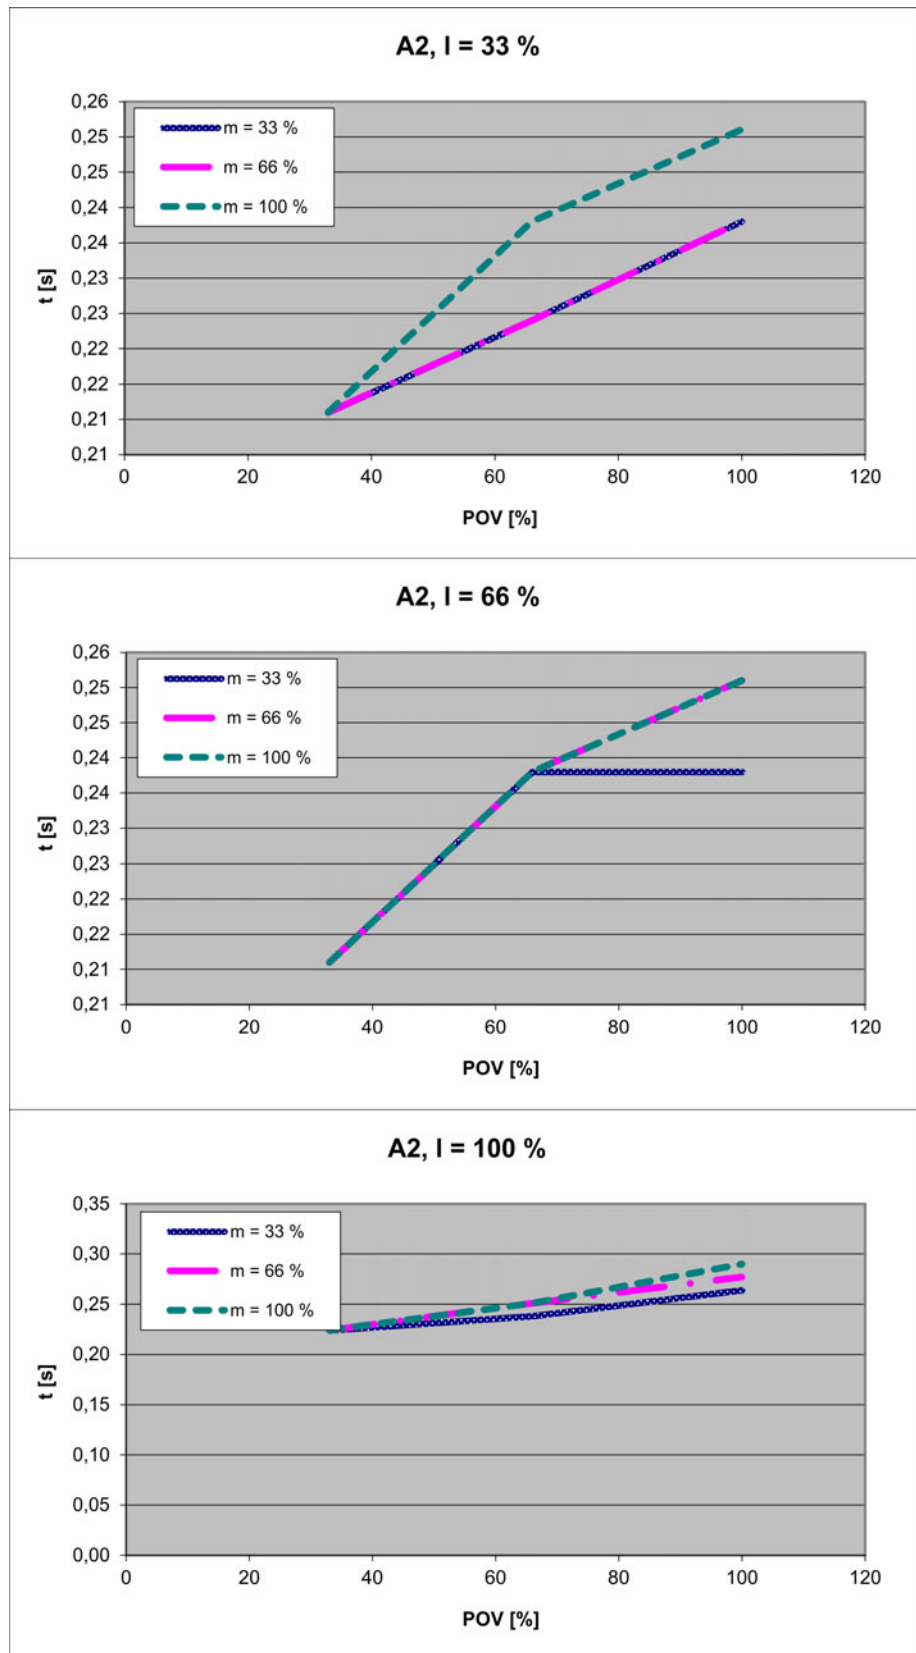


Fig. 4-16: Stopping times for STOP 1, axis 2

4.5.3.4 Stopping distances and stopping times for STOP 1, axis 3

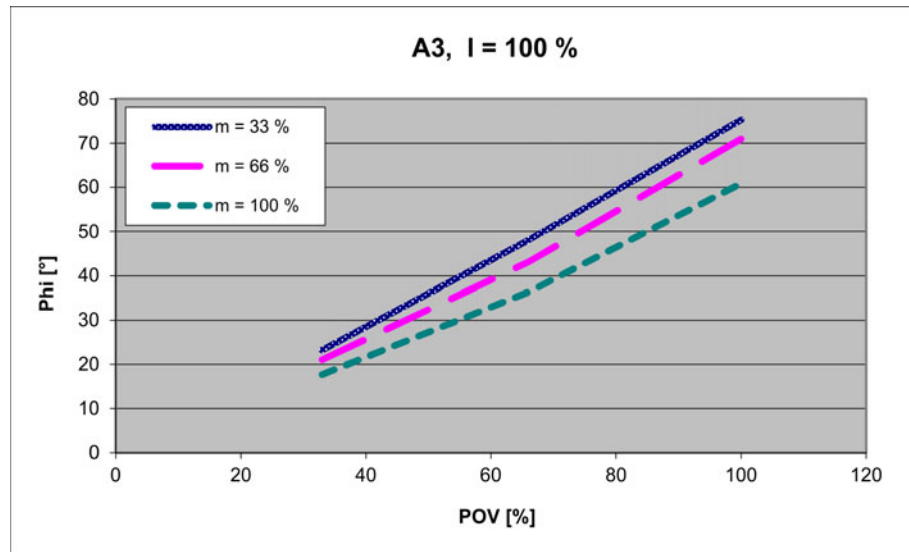


Fig. 4-17: Stopping distances for STOP 1, axis 3

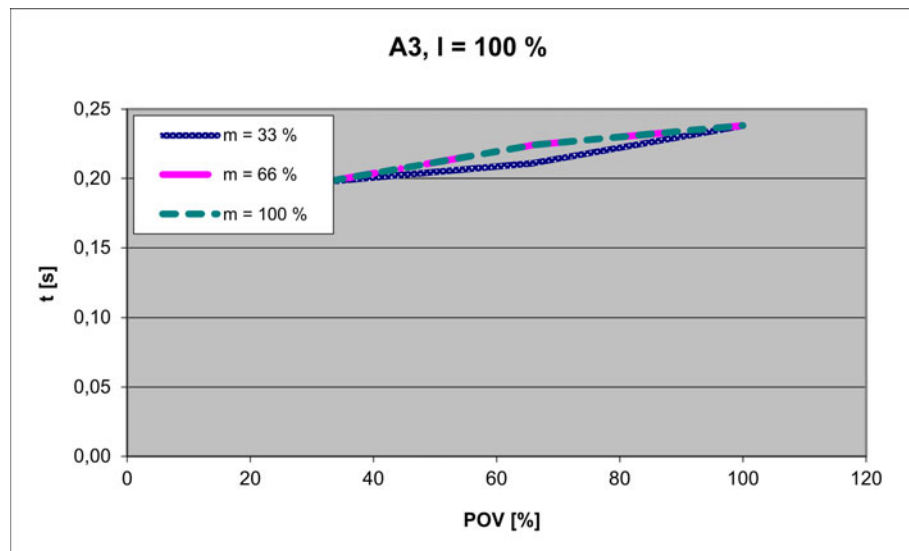


Fig. 4-18: Stopping times for STOP 1, axis 3

5 Safety

5.1 General



■ This “Safety” chapter refers to a mechanical component of an industrial robot.

■ If the mechanical component is used together with a KUKA robot controller, the “Safety” chapter of the operating instructions or assembly instructions of the robot controller must be used!

This contains all the information provided in this “Safety” chapter. It also contains additional safety information relating to the robot controller which must be observed.

■ Where this “Safety” chapter uses the term “industrial robot”, this also refers to the individual mechanical component if applicable.

5.1.1 Liability

The device described in this document is either an industrial robot or a component thereof.

Components of the industrial robot:

- Manipulator
- Robot controller
- Teach pendant
- Connecting cables
- External axes (optional)
e.g. linear unit, turn-tilt table, positioner
- Software
- Options, accessories

The industrial robot is built using state-of-the-art technology and in accordance with the recognized safety rules. Nevertheless, misuse of the industrial robot may constitute a risk to life and limb or cause damage to the industrial robot and to other material property.

The industrial robot may only be used in perfect technical condition in accordance with its designated use and only by safety-conscious persons who are fully aware of the risks involved in its operation. Use of the industrial robot is subject to compliance with this document and with the declaration of incorporation supplied together with the industrial robot. Any functional disorders affecting safety must be rectified immediately.

Safety information

Safety information cannot be held against KUKA Roboter GmbH. Even if all safety instructions are followed, this is not a guarantee that the industrial robot will not cause personal injuries or material damage.

No modifications may be carried out to the industrial robot without the authorization of KUKA Roboter GmbH. Additional components (tools, software, etc.), not supplied by KUKA Roboter GmbH, may be integrated into the industrial robot. The user is liable for any damage these components may cause to the industrial robot or to other material property.

In addition to the Safety chapter, this document contains further safety instructions. These must also be observed.

5.1.2 Intended use of the industrial robot

The industrial robot is intended exclusively for the use designated in the “Purpose” chapter of the operating instructions or assembly instructions.

Any use or application deviating from the intended use is deemed to be misuse and is not allowed. The manufacturer is not liable for any damage resulting from such misuse. The risk lies entirely with the user.

Operation of the industrial robot in accordance with its intended use also requires compliance with the operating and assembly instructions for the individual components, with particular reference to the maintenance specifications.

Misuse

Any use or application deviating from the intended use is deemed to be misuse and is not allowed. This includes e.g.:

- Transportation of persons and animals
- Use as a climbing aid
- Operation outside the specified operating parameters
- Use in potentially explosive environments
- Use in radioactive environments
- Operation without additional safeguards
- Outdoor operation
- Operation in underground mining

5.1.3 EC declaration of conformity and declaration of incorporation

The industrial robot constitutes partly completed machinery as defined by the EC Machinery Directive. The industrial robot may only be put into operation if the following preconditions are met:

- The industrial robot is integrated into a complete system.
or: The industrial robot, together with other machinery, constitutes a complete system.
or: All safety functions and safeguards required for operation in the complete machine as defined by the EC Machinery Directive have been added to the industrial robot.
- The complete system complies with the EC Machinery Directive. This has been confirmed by means of a conformity assessment procedure.

EC declaration of conformity

The system integrator must issue an EC declaration of conformity for the complete system in accordance with the Machinery Directive. The EC declaration of conformity forms the basis for the CE mark for the system. The industrial robot must always be operated in accordance with the applicable national laws, regulations and standards.

The robot controller has a CE mark in accordance with the EMC Directive and the Low Voltage Directive.

Declaration of incorporation

The partly completed machinery is supplied with a declaration of incorporation in accordance with Annex II B of the EC Machinery Directive 2006/42/EC. The assembly instructions and a list of essential requirements complied with in accordance with Annex I are integral parts of this declaration of incorporation.

The declaration of incorporation declares that the start-up of the partly completed machinery is not allowed until the partly completed machinery has been incorporated into machinery, or has been assembled with other parts to form machinery, and this machinery complies with the terms of the EC Machinery Directive, and the EC declaration of conformity is present in accordance with Annex II A.

5.1.4 Terms used

Term	Description
Axis range	Range of each axis, in degrees or millimeters, within which it may move. The axis range must be defined for each axis.
Stopping distance	Stopping distance = reaction distance + braking distance The stopping distance is part of the danger zone.
Workspace	The manipulator is allowed to move within its workspace. The workspace is derived from the individual axis ranges.
Operator (User)	The user of the industrial robot can be the management, employer or delegated person responsible for use of the industrial robot.
Danger zone	The danger zone consists of the workspace and the stopping distances.
Service life	The service life of a safety-relevant component begins at the time of delivery of the component to the customer. The service life is not affected by whether the component is used in a controller or elsewhere or not, as safety-relevant components are also subject to aging during storage
KCP	KUKA Control Panel Teach pendant for the KR C2/KR C2 edition2005 The KCP has all the operator control and display functions required for operating and programming the industrial robot.
KUKA smartPAD	see "smartPAD"
Manipulator	The robot arm and the associated electrical installations
Safety zone	The safety zone is situated outside the danger zone.
smartPAD	Teach pendant for the KR C4 The smartPAD has all the operator control and display functions required for operating and programming the industrial robot.
Stop category 0	The drives are deactivated immediately and the brakes are applied. The manipulator and any external axes (optional) perform path-oriented braking. Note: This stop category is called STOP 0 in this document.
Stop category 1	The manipulator and any external axes (optional) perform path-maintaining braking. The drives are deactivated after 1 s and the brakes are applied. Note: This stop category is called STOP 1 in this document.
Stop category 2	The drives are not deactivated and the brakes are not applied. The manipulator and any external axes (optional) are braked with a normal braking ramp. Note: This stop category is called STOP 2 in this document.
System integrator (plant integrator)	System integrators are people who safely integrate the industrial robot into a complete system and commission it.
T1	Test mode, Manual Reduced Velocity (≤ 250 mm/s)
T2	Test mode, Manual High Velocity (> 250 mm/s permissible)
External axis	Axis of motion that does not belong to the manipulator, yet is controlled with the same controller. e.g. KUKA linear unit, turn-tilt table, Posiflex

5.2 Personnel

The following persons or groups of persons are defined for the industrial robot:

- User

- Personnel



All persons working with the industrial robot must have read and understood the industrial robot documentation, including the safety chapter.

User

The user must observe the labor laws and regulations. This includes e.g.:

- The user must comply with his monitoring obligations.
- The user must carry out briefing at defined intervals.

Personnel

Personnel must be instructed, before any work is commenced, in the type of work involved and what exactly it entails as well as any hazards which may exist. Instruction must be carried out regularly. Instruction is also required after particular incidents or technical modifications.

Personnel includes:

- System integrator
- Operators, subdivided into:
 - Start-up, maintenance and service personnel
 - Operating personnel
 - Cleaning personnel



Installation, exchange, adjustment, operation, maintenance and repair must be performed only as specified in the operating or assembly instructions for the relevant component of the industrial robot and only by personnel specially trained for this purpose.

System integrator

The industrial robot is safely integrated into a complete system by the system integrator.

The system integrator is responsible for the following tasks:

- Installing the industrial robot
- Connecting the industrial robot
- Performing risk assessment
- Implementing the required safety functions and safeguards
- Issuing the EC declaration of conformity
- Attaching the CE mark
- Creating the operating instructions for the system

Operator

The operator must meet the following preconditions:

- The operator must be trained for the work to be carried out.
- Work on the industrial robot must only be carried out by qualified personnel. These are people who, due to their specialist training, knowledge and experience, and their familiarization with the relevant standards, are able to assess the work to be carried out and detect any potential hazards.



Work on the electrical and mechanical equipment of the industrial robot may only be carried out by specially trained personnel.

5.3 Workspace, safety zone and danger zone

Workspaces are to be restricted to the necessary minimum size. A workspace must be safeguarded using appropriate safeguards.

The safeguards (e.g. safety gate) must be situated inside the safety zone. In the case of a stop, the manipulator and external axes (optional) are braked and come to a stop within the danger zone.

The danger zone consists of the workspace and the stopping distances of the manipulator and external axes (optional). It must be safeguarded by means of physical safeguards to prevent danger to persons or the risk of material damage.

5.4 Overview of protective equipment

The protective equipment of the mechanical component may include:


- Mechanical end stops
- Mechanical axis limitation (optional)
- Release device (optional)
- Brake release device (optional)
- Labeling of danger areas

Not all equipment is relevant for every mechanical component.

5.4.1 Mechanical end stops

Depending on the robot variant, the axis ranges of the main and wrist axes of the manipulator are partially limited by mechanical end stops.

Additional mechanical end stops can be installed on the external axes.


 **WARNING** If the manipulator or an external axis hits an obstruction or a mechanical end stop or mechanical axis limitation, the manipulator can no longer be operated safely. The manipulator must be taken out of operation and KUKA Roboter GmbH must be consulted before it is put back into operation.

5.4.2 Mechanical axis limitation (optional)


Some manipulators can be fitted with mechanical axis limitation systems in axes A1 to A3. The axis limitation systems restrict the working range to the required minimum. This increases personal safety and protection of the system.

In the case of manipulators that are not designed to be fitted with mechanical axis limitation, the workspace must be laid out in such a way that there is no danger to persons or material property, even in the absence of mechanical axis limitation.

If this is not possible, the workspace must be limited by means of photoelectric barriers, photoelectric curtains or obstacles on the system side. There must be no shearing or crushing hazards at the loading and transfer areas.

 This option is not available for all robot models. Information on specific robot models can be obtained from KUKA Roboter GmbH.

5.4.3 Options for moving the manipulator without drive energy

 The system user is responsible for ensuring that the training of personnel with regard to the response to emergencies or exceptional situations also includes how the manipulator can be moved without drive energy.

Description

The following options are available for moving the manipulator without drive energy after an accident or malfunction:

- Release device (optional)
The release device can be used for the main axis drive motors and, depending on the robot variant, also for the wrist axis drive motors.
- Brake release device (option)
The brake release device is designed for robot variants whose motors are not freely accessible.
- Moving the wrist axes directly by hand
There is no release device available for the wrist axes of variants in the low payload category. This is not necessary because the wrist axes can be moved directly by hand.



Information about the options available for the various robot models and about how to use them can be found in the assembly and operating instructions for the robot or requested from KUKA Roboter GmbH.

NOTICE

Moving the manipulator without drive energy can damage the motor brakes of the axes concerned. The motor must be replaced if the brake has been damaged. The manipulator may therefore be moved without drive energy only in emergencies, e.g. for rescuing persons.

5.4.4 Labeling on the industrial robot

All plates, labels, symbols and marks constitute safety-relevant parts of the industrial robot. They must not be modified or removed.

Labeling on the industrial robot consists of:

- Identification plates
- Warning signs
- Safety symbols
- Designation labels
- Cable markings
- Rating plates



Further information is contained in the technical data of the operating instructions or assembly instructions of the components of the industrial robot.

5.5 Safety measures**5.5.1 General safety measures**

The industrial robot may only be used in perfect technical condition in accordance with its intended use and only by safety-conscious persons. Operator errors can result in personal injury and damage to property.

It is important to be prepared for possible movements of the industrial robot even after the robot controller has been switched off and locked out. Incorrect installation (e.g. overload) or mechanical defects (e.g. brake defect) can cause the manipulator or external axes to sag. If work is to be carried out on a switched-off industrial robot, the manipulator and external axes must first be moved into a position in which they are unable to move on their own, whether

the payload is mounted or not. If this is not possible, the manipulator and external axes must be secured by appropriate means.

⚠ DANGER In the absence of operational safety functions and safeguards, the industrial robot can cause personal injury or material damage. If safety functions or safeguards are dismantled or deactivated, the industrial robot may not be operated.

⚠ DANGER Standing underneath the robot arm can cause death or injuries. For this reason, standing underneath the robot arm is prohibited!

⚠ CAUTION The motors reach temperatures during operation which can cause burns to the skin. Contact must be avoided. Appropriate safety precautions must be taken, e.g. protective gloves must be worn.

KCP/smartPAD

The user must ensure that the industrial robot is only operated with the KCP/smartPAD by authorized persons.

If more than one KCP/smartPAD is used in the overall system, it must be ensured that each device is unambiguously assigned to the corresponding industrial robot. They must not be interchanged.

⚠ WARNING The operator must ensure that decoupled KCPs/smartPADs are immediately removed from the system and stored out of sight and reach of personnel working on the industrial robot. This serves to prevent operational and non-operational EMERGENCY STOP devices from becoming interchanged. Failure to observe this precaution may result in death, severe injuries or considerable damage to property.

External keyboard, external mouse

An external keyboard and/or external mouse may only be used if the following conditions are met:

- Start-up or maintenance work is being carried out.
- The drives are switched off.
- There are no persons in the danger zone.

The KCP/smartPAD must not be used as long as an external keyboard and/or external mouse are connected to the control cabinet.

The external keyboard and/or external mouse must be removed from the control cabinet as soon as the start-up or maintenance work is completed or the KCP/smartPAD is connected.

Modifications

After modifications to the industrial robot, checks must be carried out to ensure the required safety level. The valid national or regional work safety regulations must be observed for this check. The correct functioning of all safety functions must also be tested.

New or modified programs must always be tested first in Manual Reduced Velocity mode (T1).

After modifications to the industrial robot, existing programs must always be tested first in Manual Reduced Velocity mode (T1). This applies to all components of the industrial robot and includes modifications to the software and configuration settings.

Faults

The following tasks must be carried out in the case of faults in the industrial robot:

- Switch off the robot controller and secure it (e.g. with a padlock) to prevent unauthorized persons from switching it on again.
- Indicate the fault by means of a label with a corresponding warning (tag-out).
- Keep a record of the faults.
- Eliminate the fault and carry out a function test.

5.5.2 Transportation

Manipulator

The prescribed transport position of the manipulator must be observed. Transportation must be carried out in accordance with the operating instructions or assembly instructions of the robot.

Avoid vibrations and impacts during transportation in order to prevent damage to the manipulator.

Robot controller

The prescribed transport position of the robot controller must be observed. Transportation must be carried out in accordance with the operating instructions or assembly instructions of the robot controller.

Avoid vibrations and impacts during transportation in order to prevent damage to the robot controller.

External axis (optional)

The prescribed transport position of the external axis (e.g. KUKA linear unit, turn-tilt table, positioner) must be observed. Transportation must be carried out in accordance with the operating instructions or assembly instructions of the external axis.

5.5.3 Start-up and recommissioning

Before starting up systems and devices for the first time, a check must be carried out to ensure that the systems and devices are complete and operational, that they can be operated safely and that any damage is detected.

The valid national or regional work safety regulations must be observed for this check. The correct functioning of all safety circuits must also be tested.



The passwords for logging onto the KUKA System Software as “Expert” and “Administrator” must be changed before start-up and must only be communicated to authorized personnel.



The robot controller is preconfigured for the specific industrial robot. If cables are interchanged, the manipulator and the external axes (optional) may receive incorrect data and can thus cause personal injury or material damage. If a system consists of more than one manipulator, always connect the connecting cables to the manipulators and their corresponding robot controllers.




If additional components (e.g. cables), which are not part of the scope of supply of KUKA Roboter GmbH, are integrated into the industrial robot, the user is responsible for ensuring that these components do not adversely affect or disable safety functions.

NOTICE

If the internal cabinet temperature of the robot controller differs greatly from the ambient temperature, condensation can form, which may cause damage to the electrical components. Do not put the robot controller into operation until the internal temperature of the cabinet has adjusted to the ambient temperature.

- Function test** The following tests must be carried out before start-up and recommissioning:
It must be ensured that:
- The industrial robot is correctly installed and fastened in accordance with the specifications in the documentation.
 - There is no damage to the robot that could be attributed to external forces.
Example: Dents or abrasion that could be caused by an impact or collision.

 **WARNING** In the case of such damage, the affected components must be exchanged. In particular, the motor and counterbalancing system must be checked carefully.
External forces can cause non-visible damage. For example, it can lead to a gradual loss of drive power from the motor, resulting in unintended movements of the manipulator. Death, injuries or considerable damage to property may otherwise result.

- There are no foreign bodies or loose parts on the industrial robot.
- All required safety equipment is correctly installed and operational.
- The power supply ratings of the industrial robot correspond to the local supply voltage and mains type.
- The ground conductor and the equipotential bonding cable are sufficiently rated and correctly connected.
- The connecting cables are correctly connected and the connectors are locked.

5.5.4 Manual mode

Manual mode is the mode for setup work. Setup work is all the tasks that have to be carried out on the industrial robot to enable automatic operation. Setup work includes:

- Jog mode
- Teaching
- Programming
- Program verification

The following must be taken into consideration in manual mode:

- If the drives are not required, they must be switched off to prevent the manipulator or the external axes (optional) from being moved unintentionally.
- New or modified programs must always be tested first in Manual Reduced Velocity mode (T1).
- The manipulator, tooling or external axes (optional) must never touch or project beyond the safety fence.
- Workpieces, tooling and other objects must not become jammed as a result of the industrial robot motion, nor must they lead to short-circuits or be liable to fall off.
- All setup work must be carried out, where possible, from outside the safeguarded area.

If the setup work has to be carried out inside the safeguarded area, the following must be taken into consideration:

In **Manual Reduced Velocity mode (T1)**:

- If it can be avoided, there must be no other persons inside the safeguarded area.
If it is necessary for there to be several persons inside the safeguarded area, the following must be observed:
 - Each person must have an enabling device.

- All persons must have an unimpeded view of the industrial robot.
- Eye-contact between all persons must be possible at all times.
- The operator must be so positioned that he can see into the danger area and get out of harm's way.

In **Manual High Velocity mode (T2)**:

- This mode may only be used if the application requires a test at a velocity higher than possible in T1 mode.
- Teaching and programming are not permissible in this operating mode.
- Before commencing the test, the operator must ensure that the enabling devices are operational.
- The operator must be positioned outside the danger zone.
- There must be no other persons inside the safeguarded area. It is the responsibility of the operator to ensure this.

5.5.5 Automatic mode

Automatic mode is only permissible in compliance with the following safety measures:

- All safety equipment and safeguards are present and operational.
- There are no persons in the system.
- The defined working procedures are adhered to.

If the manipulator or an external axis (optional) comes to a standstill for no apparent reason, the danger zone must not be entered until an EMERGENCY STOP has been triggered.


5.5.6 Maintenance and repair

After maintenance and repair work, checks must be carried out to ensure the required safety level. The valid national or regional work safety regulations must be observed for this check. The correct functioning of all safety functions must also be tested.

The purpose of maintenance and repair work is to ensure that the system is kept operational or, in the event of a fault, to return the system to an operational state. Repair work includes troubleshooting in addition to the actual repair itself.

The following safety measures must be carried out when working on the industrial robot:

- Carry out work outside the danger zone. If work inside the danger zone is necessary, the user must define additional safety measures to ensure the safe protection of personnel.
- Switch off the industrial robot and secure it (e.g. with a padlock) to prevent it from being switched on again. If it is necessary to carry out work with the robot controller switched on, the user must define additional safety measures to ensure the safe protection of personnel.
- If it is necessary to carry out work with the robot controller switched on, this may only be done in operating mode T1.
- Label the system with a sign indicating that work is in progress. This sign must remain in place, even during temporary interruptions to the work.
- The EMERGENCY STOP devices must remain active. If safety functions or safeguards are deactivated during maintenance or repair work, they must be reactivated immediately after the work is completed.

 **DANGER** Before work is commenced on live parts of the robot system, the main switch must be turned off and secured against being switched on again. The system must then be checked to ensure that it is deenergized. It is not sufficient, before commencing work on live parts, to execute an EMERGENCY STOP or a safety stop, or to switch off the drives, as this does not disconnect the robot system from the mains power supply. Parts remain energized. Death or severe injuries may result.

Faulty components must be replaced using new components with the same article numbers or equivalent components approved by KUKA Roboter GmbH for this purpose.

Cleaning and preventive maintenance work is to be carried out in accordance with the operating instructions.

Robot controller

Even when the robot controller is switched off, parts connected to peripheral devices may still carry voltage. The external power sources must therefore be switched off if work is to be carried out on the robot controller.

The ESD regulations must be adhered to when working on components in the robot controller.

Voltages in excess of 50 V (up to 600 V) can be present in various components for several minutes after the robot controller has been switched off! To prevent life-threatening injuries, no work may be carried out on the industrial robot in this time.

Water and dust must be prevented from entering the robot controller.

Counterbalancing system

Some robot variants are equipped with a hydropneumatic, spring or gas cylinder counterbalancing system.

The hydropneumatic and gas cylinder counterbalancing systems are pressure equipment and, as such, are subject to obligatory equipment monitoring and the provisions of the Pressure Equipment Directive.

The user must comply with the applicable national laws, regulations and standards pertaining to pressure equipment.

Inspection intervals in Germany in accordance with Industrial Safety Order, Sections 14 and 15. Inspection by the user before commissioning at the installation site.

The following safety measures must be carried out when working on the counterbalancing system:

- The manipulator assemblies supported by the counterbalancing systems must be secured.
- Work on the counterbalancing systems must only be carried out by qualified personnel.

Hazardous substances

The following safety measures must be carried out when handling hazardous substances:

- Avoid prolonged and repeated intensive contact with the skin.
- Avoid breathing in oil spray or vapors.
- Clean skin and apply skin cream.



To ensure safe use of our products, we recommend regularly re-requesting up-to-date safety data sheets for hazardous substances.

5.5.7 Decommissioning, storage and disposal

The industrial robot must be decommissioned, stored and disposed of in accordance with the applicable national laws, regulations and standards.

5.6 Applied norms and regulations

Name	Definition	Edition
2006/42/EC	Machinery Directive: Directive 2006/42/EC of the European Parliament and of the Council of 17 May 2006 on machinery, and amending Directive 95/16/EC (recast)	2006
2014/68/EU	Pressure Equipment Directive: Directive 2014/68/EU of the European Parliament and of the Council of 15 May 2014 on the approximation of the laws of the Member States concerning pressure equipment (Only applicable for robots with hydropneumatic counterbalancing system.)	2014
EN ISO 13850	Safety of machinery: Emergency stop - Principles for design	2015
EN ISO 13849-1	Safety of machinery: Safety-related parts of control systems - Part 1: General principles of design	2015
EN ISO 13849-2	Safety of machinery: Safety-related parts of control systems - Part 2: Validation	2012
EN ISO 12100	Safety of machinery: General principles of design, risk assessment and risk reduction	2010
EN ISO 10218-1	Industrial robots – Safety requirements Part 1: Robots Note: Content equivalent to ANSI/RIA R.15.06-2012, Part 1	2011
EN 614-1 + A1	Safety of machinery: Ergonomic design principles - Part 1: Terms and general principles	2009
EN 61000-6-2	Electromagnetic compatibility (EMC): Part 6-2: Generic standards; Immunity for industrial environments	2005
EN 61000-6-4 + A1	Electromagnetic compatibility (EMC): Part 6-4: Generic standards; Emission standard for industrial environments	2011

EN 60204-1 + A1**Safety of machinery:**

2009

Electrical equipment of machines - Part 1: General requirements

6 Planning

6.1 Information for planning

In the planning and design phase, care must be taken regarding the functions or applications to be executed by the kinematic system. The following conditions can lead to premature wear. They necessitate shorter maintenance intervals and/or earlier exchange of components. In addition, the permissible operating parameters specified in the technical data must be taken into account and observed during planning.

- Continuous operation near temperature limits or in abrasive environments
- Continuous operation close to the performance limits, e.g. high rpm of an axis
- High duty cycle of individual axes
- Monotonous motion profiles, e.g. short, frequently recurring axis motions
- Static axis positions, e.g. continuous vertical position of a wrist axis
- External forces (process forces) acting on the robot

If one or more of these conditions are to apply during operation of the kinematic system, KUKA Roboter GmbH must be consulted.

If the robot reaches its corresponding operation limit or if it is operated near the limit for a period of time, the built-in monitoring functions come into effect and the robot is automatically switched off.

This protective function can limit the availability of the robot system.

6.2 Mounting base

Description The mounting base with centering is used when the robot is fastened to the floor, i.e. directly on a concrete foundation.

The mounting base consists of:

- Bedplate
- Chemical anchors (resin-bonded anchors) with Dynamic Set
- Fastening elements

This mounting variant requires a level and smooth surface on a concrete foundation with adequate load bearing capacity. The concrete foundation must be able to accommodate the forces occurring during operation. The minimum dimensions must be observed.

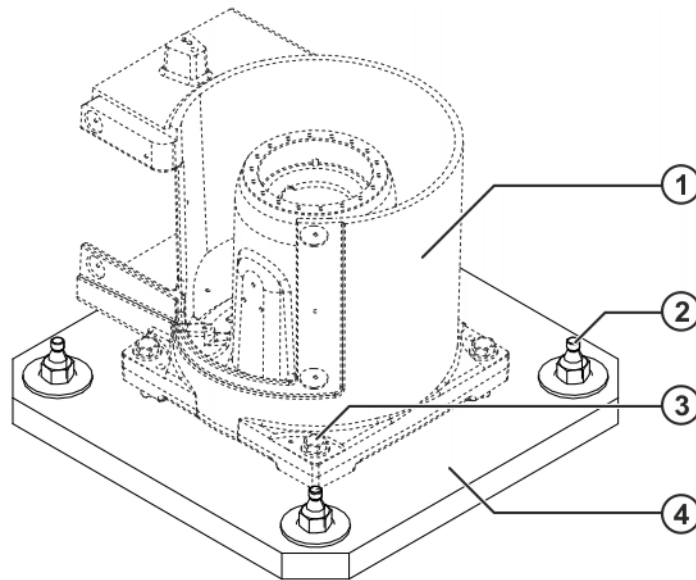


Fig. 6-1: Mounting base

- | | | | |
|---|---------------------------------------|---|--------------|
| 1 | Robot base frame | 3 | Hexagon bolt |
| 2 | Chemical anchor (resin-bonded anchor) | 4 | Bedplate |

Grade of concrete for foundations

When producing foundations from concrete, observe the load-bearing capacity of the ground and the country-specific construction regulations. There must be no layers of insulation or screed between the bedplates and the concrete foundation. The quality of the concrete must meet the requirements of the following standard:

- C20/25 according to DIN EN 206-1:2001/DIN 1045-2:2008

Dimensioned drawing

The following illustration (>>> Fig. 6-2) provides all the necessary information on the mounting base, together with the required foundation data.

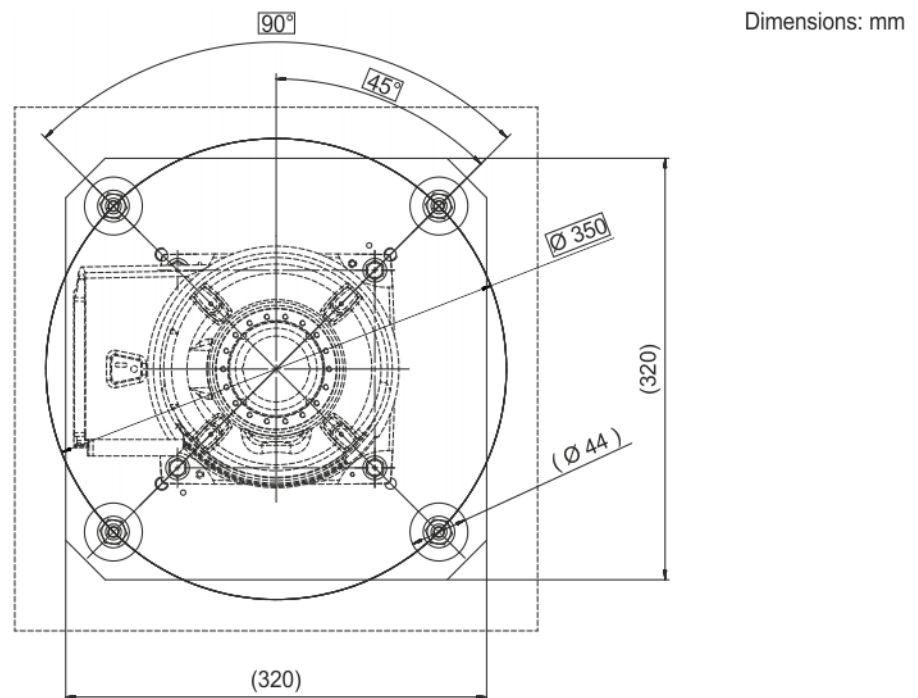


Fig. 6-2: Dimensioned drawing, mounting base

To ensure that the anchor forces are safely transmitted to the foundation, observe the dimensions for concrete foundations specified in the following illustration (>>> Fig. 6-3).

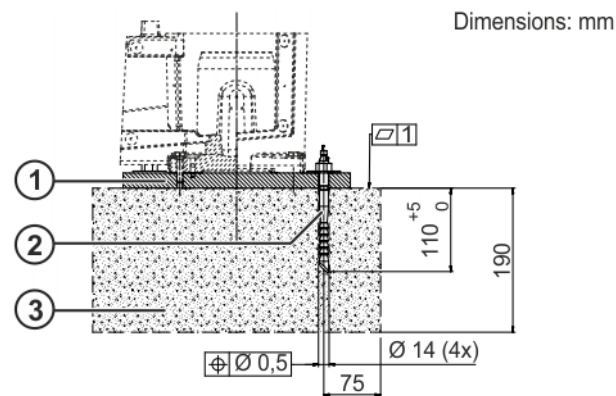


Fig. 6-3: Cross-section of foundations

- 1 Bedplate
- 2 Chemical anchor (resin-bonded anchor) with Dynamic Set
- 3 Concrete foundation

6.3 Machine frame mounting

Description

The machine frame mounting assembly (>>> Fig. 6-4) is used when the robot is fastened on a steel structure prepared by the customer, a booster frame (pedestal) or a KUKA linear unit. This assembly is also used if the robot is installed on the wall or ceiling. The robot is fastened using 4 hexagon bolts. Two locating pins are used for centering.

The steel structure used by the customer must be designed in such a way that the forces generated (mounting base load, maximum load) are safely transmitted via the screw connection and the necessary stiffness is ensured. The specified surface values and tightening torques must be observed.

The following values must be taken into consideration in the design:

- Screw force: $F_s = 62 \text{ kN}$
- Stripping safety: The material of the substructure must be selected so that the stripping safety is ensured (e.g. S355J2G3).

The machine frame mounting assembly consists of:

- Locating pin
- Hexagon bolts with conical spring washers

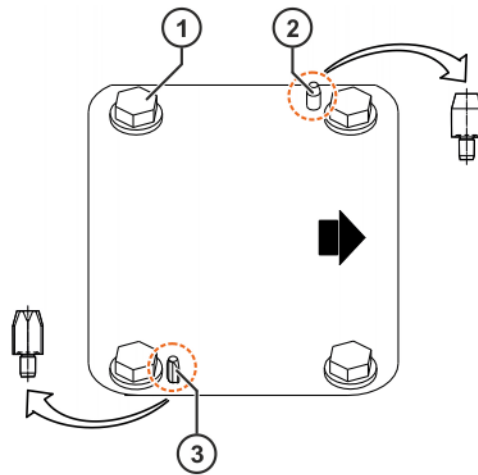


Fig. 6-4: Machine frame mounting

- 1 Hexagon bolt
- 2 Cylindrical locating pin
- 3 Flat-sided locating pin

**Dimensioned
drawing**

The following diagram contains all the necessary information that must be observed when preparing the mounting surface and the holes (>>> Fig. 6-5).

- Motor cable, X20 - XM1/XM2-6
- Data cable, X21 - X15/X18
- Ground conductor (optional)



For the connecting cables, a ground conductor is always required to provide a low-resistance connection between the robot and the control cabinet in accordance with DIN EN 60204. The ground conductor is not part of the scope of supply and can be ordered as an option. The connection must be made by the customer. The tapped holes for connecting the ground conductor are located on the base frame of the robot.

The following points must be observed when planning and routing the connecting cables:

- The bending radius for fixed routing must not be less than 50 mm for motor cables and 30 mm for control cables.
- Protect cables against exposure to mechanical stress.
- Route the cables without mechanical stress – no tensile forces on the connectors
- Cables are only to be installed indoors.
- Observe the permissible temperature range (fixed installation) of 263 K (-10 °C) to 343 K (+70 °C).
- Route the motor cables and the control cables separately in metal ducts; if necessary, additional measures must be taken to ensure electromagnetic compatibility (EMC).

Interface A1

Interface A1 is located at the rear of the base frame. The connections for the motor and data cables are shown in the following illustration.

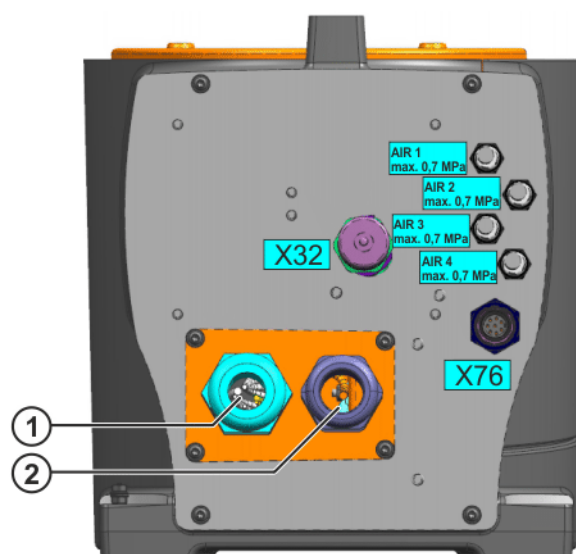


Fig. 6-6: Interface A1

- 1 Motor cable (XM1/XM2-6)
- 2 Data cable (X15/X18)

6.5 Customer interfaces

Customer interface A1

Interface A1 is located at the rear of the base frame.

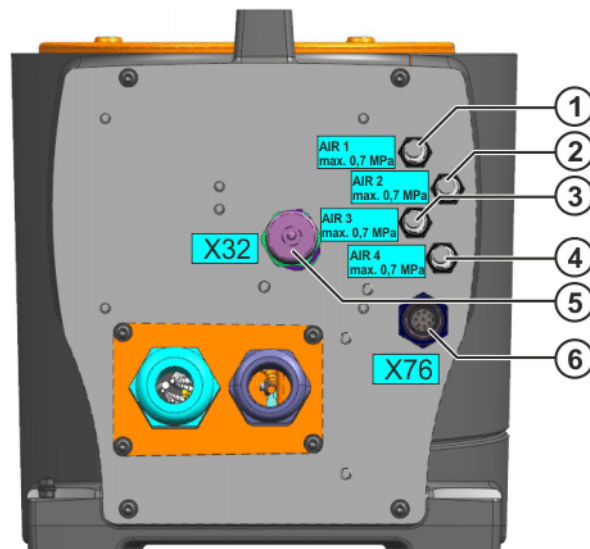


Fig. 6-7: Customer interface A1

- 1 Connection for air line AIR 1
Outside diameter: 4 mm
- 2 Connection for air line AIR 2
Outside diameter: 4 mm
- 3 Connection for air line AIR 3
Outside diameter: 4 mm
- 4 Connection for air line AIR 4
Outside diameter: 4 mm
- 5 Connection MEMD X32
- 6 Energy supply system connection X76

Interface A4

Interface A4 is located under the cover of the in-line wrist.

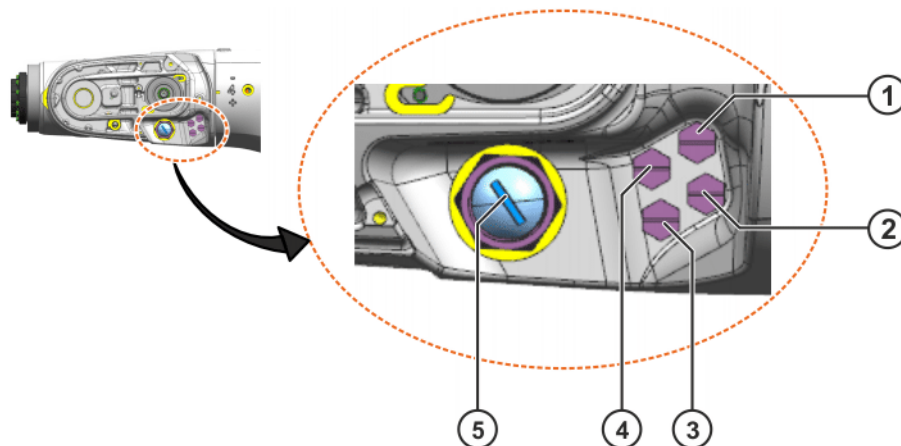



Fig. 6-8: Customer interface A4

- | | |
|------------------|------------------|
| 1 Air line AIR 2 | 4 Air line AIR 1 |
| 2 Air line AIR 4 | 5 Connection X96 |
| 3 Air line AIR 3 | |

Energy supply system X76-X96

Designation	Limit values
Rated current	2 A
Rated voltage	24 V
Connector type	M12
Number of poles	8
Coding	A standard

The entire energy supply system must be safeguarded against overload and short circuit by the customer upstream of connector X76.

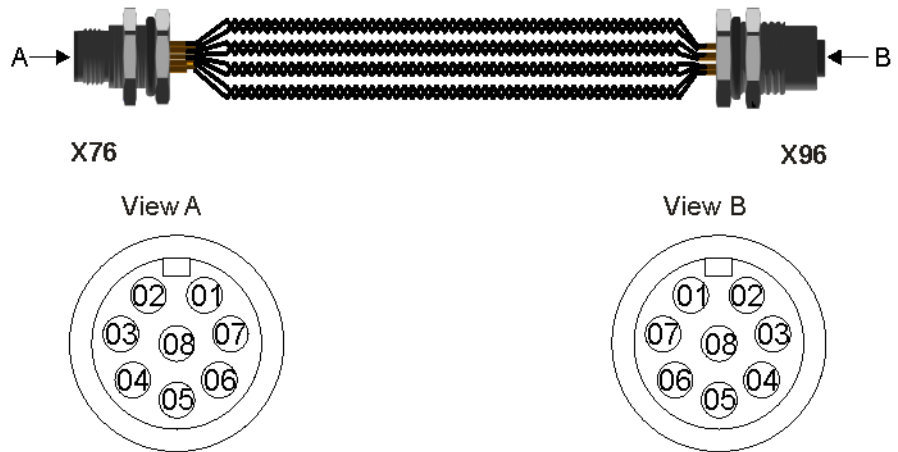

Wiring diagram

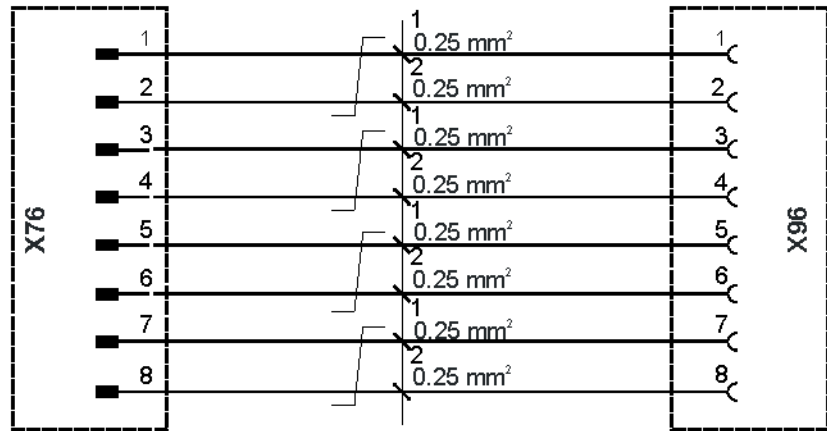


Fig. 6-9: Wiring diagram, energy supply system, X76-X96

Air connections

Customer-specific air connections AIR 1 to AIR 4 with the following values:

Designation	Limit values
Max. pressure	7 bar
Vacuum	Atmospheric pressure minus 0.95 bar

7 Transportation

7.1 Transporting the manipulator

Description Move the robot into its transport position each time it is transported. It must be ensured that the robot is stable while it is being transported. The robot must remain in its transport position until it has been fastened to the foundation. Before the robot is lifted, it must be ensured that it is free from obstructions. Remove all transport safeguards, such as nails and screws, in advance. First remove any corrosion or glue on contact surfaces.

Transport position The robot must be in the transport position before it can be transported (>>> Fig. 7-1). The robot is in the transport position when the axes are in the following positions:

Axis	A1	A2	A3	A4	A5	A6
Angle	0°	-130°	+150°	0°	0°	0°

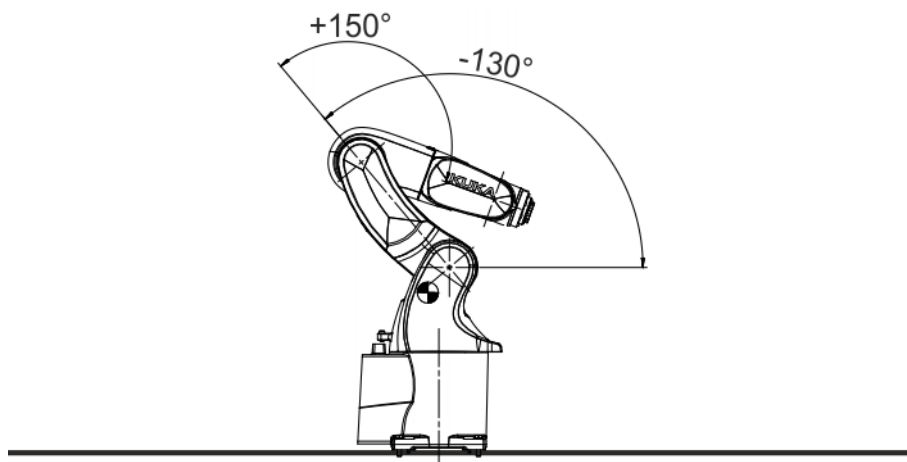


Fig. 7-1: Transport position

Transport dimensions The transport dimensions for the robot can be noted from the following figure (>>> Fig. 7-2). The position of the center of gravity and the weight vary according to the specific configuration. The specified dimensions refer to the robot without equipment.

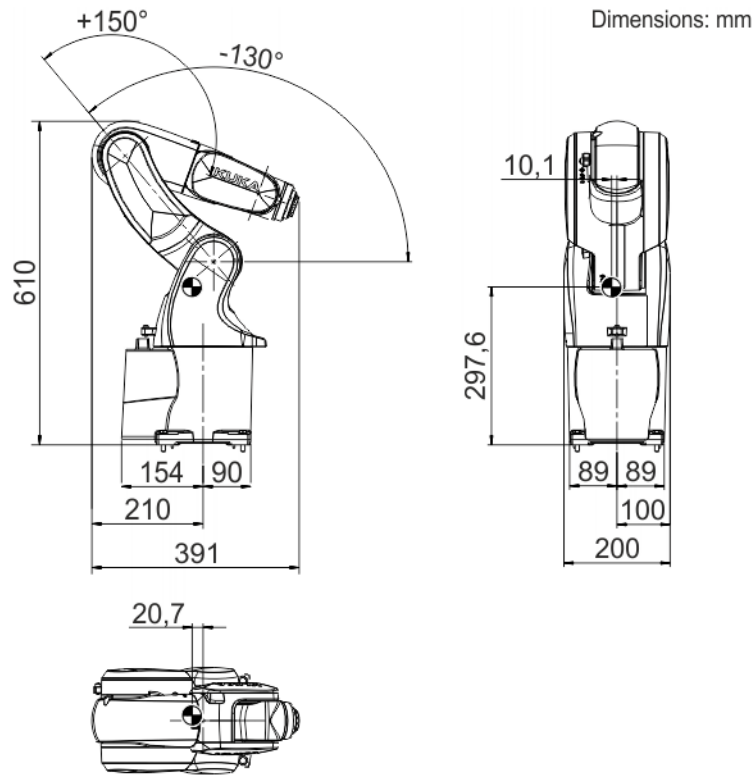


Fig. 7-2: Transport dimensions

1 Robot

2 Center of gravity

Transportation using lifting tackle

⚠ WARNING Use of unsuitable handling equipment may result in damage to the robot or injury to persons. Only use authorized handling equipment with a sufficient load-bearing capacity. Only transport the robot in the manner specified here.

The robot is transported using a round sling. For this, it must be in the transport position. Carefully roll up the connecting cables and secure them with a cable strap.

The round sling must be routed beneath the link arm to the in-line wrist as illustrated. All sides must be long enough and must be routed in such a way that the robot is not damaged. Installed tools and items of equipment can cause undesirable shifts in the center of gravity.

The position of the robot in the illustration does not correspond to the transport position. The illustration shows the routing of the round sling.

⚠ WARNING The robot may tip during transportation. Risk of personal injury and damage to property. If the robot is being transported using lifting tackle, special care must be exercised to prevent it from tipping. Additional safeguarding measures must be taken. It is forbidden to pick up the robot in any other way using a crane!

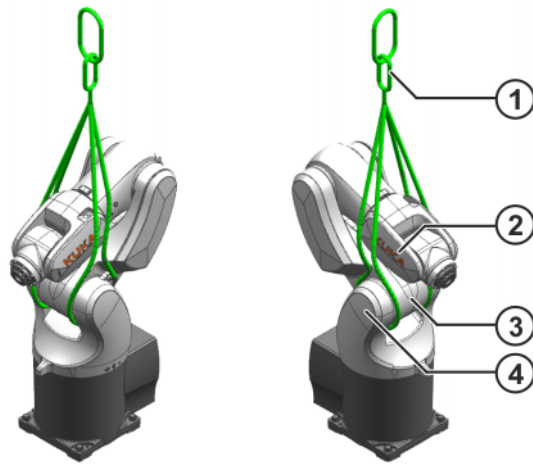


Fig. 7-3: Transportation using lifting tackle

- | | | | |
|---|-------------------------|---|-----------------|
| 1 | Lifting tackle assembly | 3 | Link arm |
| 2 | In-line wrist | 4 | Rotating column |

8 KUKA Service

8.1 Requesting support

Introduction	This documentation provides information on operation and operator control, and provides assistance with troubleshooting. For further assistance, please contact your local KUKA subsidiary.
Information	<p>The following information is required for processing a support request:</p> <ul style="list-style-type: none"> ■ Description of the problem, including information about the duration and frequency of the fault ■ As comprehensive information as possible about the hardware and software components of the overall system <p>The following list gives an indication of the information which is relevant in many cases:</p> <ul style="list-style-type: none"> ■ Model and serial number of the kinematic system, e.g. the manipulator ■ Model and serial number of the controller ■ Model and serial number of the energy supply system ■ Designation and version of the system software ■ Designations and versions of other software components or modifications ■ Diagnostic package KRCDiag <p>Additionally for KUKA Sunrise: Existing projects including applications For versions of KUKA System Software older than V8: Archive of the software (KRCDiag is not yet available here.)</p> <ul style="list-style-type: none"> ■ Application used ■ External axes used

8.2 KUKA Customer Support

Availability	KUKA Customer Support is available in many countries. Please do not hesitate to contact us if you have any questions.
Argentina	<p>Ruben Costantini S.A. (Agency) Luis Angel Huergo 13 20 Parque Industrial 2400 San Francisco (CBA) Argentina Tel. +54 3564 421033 Fax +54 3564 428877 ventas@costantini-sa.com</p>
Australia	<p>KUKA Robotics Australia Pty Ltd 45 Fennell Street Port Melbourne VIC 3207 Australia Tel. +61 3 9939 9656 info@kuka-robotics.com.au www.kuka-robotics.com.au</p>

Belgium	KUKA Automatisering + Robots N.V. Centrum Zuid 1031 3530 Houthalen Belgium Tel. +32 11 516160 Fax +32 11 526794 info@kuka.be www.kuka.be
Brazil	KUKA Roboter do Brasil Ltda. Travessa Claudio Armando, nº 171 Bloco 5 - Galpões 51/52 Bairro Assunção CEP 09861-7630 São Bernardo do Campo - SP Brazil Tel. +55 11 4942-8299 Fax +55 11 2201-7883 info@kuka-roboter.com.br www.kuka-roboter.com.br
Chile	Robotec S.A. (Agency) Santiago de Chile Chile Tel. +56 2 331-5951 Fax +56 2 331-5952 robotec@robotec.cl www.robotec.cl
China	KUKA Robotics China Co., Ltd. No. 889 Kungang Road Xiaokunshan Town Songjiang District 201614 Shanghai P. R. China Tel. +86 21 5707 2688 Fax +86 21 5707 2603 info@kuka-robotics.cn www.kuka-robotics.com
Germany	KUKA Roboter GmbH Zugspitzstr. 140 86165 Augsburg Germany Tel. +49 821 797-1926 Fax +49 821 797-41 1926 Hotline.robotics.de@kuka.com www.kuka-roboter.de

France KUKA Automatismes + Robotique SAS
Techvallée
6, Avenue du Parc
91140 Villebon S/Yvette
France
Tel. +33 1 6931660-0
Fax +33 1 6931660-1
commercial@kuka.fr
www.kuka.fr

India KUKA Robotics India Pvt. Ltd.
Office Number-7, German Centre,
Level 12, Building No. - 9B
DLF Cyber City Phase III
122 002 Gurgaon
Haryana
India
Tel. +91 124 4635774
Fax +91 124 4635773
info@kuka.in
www.kuka.in

Italy KUKA Roboter Italia S.p.A.
Via Pavia 9/a - int.6
10098 Rivoli (TO)
Italy
Tel. +39 011 959-5013
Fax +39 011 959-5141
kuka@kuka.it
www.kuka.it

Japan KUKA Robotics Japan K.K.
YBP Technical Center
134 Godo-cho, Hodogaya-ku
Yokohama, Kanagawa
240 0005
Japan
Tel. +81 45 744 7691
Fax +81 45 744 7696
info@kuka.co.jp

Canada KUKA Robotics Canada Ltd.
6710 Maritz Drive - Unit 4
Mississauga
L5W 0A1
Ontario
Canada
Tel. +1 905 670-8600
Fax +1 905 670-8604
info@kukarobotics.com
www.kuka-robotics.com/canada

Korea	KUKA Robotics Korea Co. Ltd. RIT Center 306, Gyeonggi Technopark 1271-11 Sa 3-dong, Sangnok-gu Ansan City, Gyeonggi Do 426-901 Korea Tel. +82 31 501-1451 Fax +82 31 501-1461 info@kukakorea.com
Malaysia	KUKA Robot Automation (M) Sdn Bhd South East Asia Regional Office No. 7, Jalan TPP 6/6 Taman Perindustrian Puchong 47100 Puchong Selangor Malaysia Tel. +60 (03) 8063-1792 Fax +60 (03) 8060-7386 info@kuka.com.my
Mexico	KUKA de México S. de R.L. de C.V. Progreso #8 Col. Centro Industrial Puente de Vigas Tlalnepantla de Baz 54020 Estado de México Mexico Tel. +52 55 5203-8407 Fax +52 55 5203-8148 info@kuka.com.mx www.kuka-robotics.com/mexico
Norway	KUKA Sveiseanlegg + Roboter Sentrumsvegen 5 2867 Hov Norway Tel. +47 61 18 91 30 Fax +47 61 18 62 00 info@kuka.no
Austria	KUKA Roboter CEE GmbH Gruberstraße 2-4 4020 Linz Austria Tel. +43 7 32 78 47 52 Fax +43 7 32 79 38 80 office@kuka-roboter.at www.kuka.at

Poland KUKA Roboter CEE GmbH Poland
Spółka z ograniczoną odpowiedzialnością
Oddział w Polsce
Ul. Porcelanowa 10
40-246 Katowice
Poland
Tel. +48 327 30 32 13 or -14
Fax +48 327 30 32 26
ServicePL@kuka-roboter.de

Portugal KUKA Robots IBÉRICA, S.A.
Rua do Alto da Guerra n° 50
Armazém 04
2910 011 Setúbal
Portugal
Tel. +351 265 729 780
Fax +351 265 729 782
info.portugal@kukapt.com
www.kuka.com

Russia KUKA Robotics RUS
Werbnaja ul. 8A
107143 Moskau
Russia
Tel. +7 495 781-31-20
Fax +7 495 781-31-19
info@kuka-robotics.ru
www.kuka-robotics.ru

Sweden KUKA Svetsanläggningar + Robotar AB
A. Odhners gata 15
421 30 Västra Frölunda
Sweden
Tel. +46 31 7266-200
Fax +46 31 7266-201
info@kuka.se

Switzerland KUKA Roboter Schweiz AG
Industriestr. 9
5432 Neuenhof
Switzerland
Tel. +41 44 74490-90
Fax +41 44 74490-91
info@kuka-roboter.ch
www.kuka-roboter.ch

Spain	KUKA Robots IBÉRICA, S.A. Pol. Industrial Torrent de la Pastera Carrer del Bages s/n 08800 Vilanova i la Geltrú (Barcelona) Spain Tel. +34 93 8142-353 Fax +34 93 8142-950 comercial@kukarob.es www.kuka.es
South Africa	Jendamark Automation LTD (Agency) 76a York Road North End 6000 Port Elizabeth South Africa Tel. +27 41 391 4700 Fax +27 41 373 3869 www.jendamark.co.za
Taiwan	KUKA Robot Automation Taiwan Co., Ltd. No. 249 Pujong Road Jungli City, Taoyuan County 320 Taiwan, R. O. C. Tel. +886 3 4331988 Fax +886 3 4331948 info@kuka.com.tw www.kuka.com.tw
Thailand	KUKA Robot Automation (M)SdnBhd Thailand Office c/o Maccall System Co. Ltd. 49/9-10 Soi Kingkaew 30 Kingkaew Road Tt. Rachatheva, A. Bangpli Samutprakarn 10540 Thailand Tel. +66 2 7502737 Fax +66 2 6612355 atika@ji-net.com www.kuka-roboter.de
Czech Republic	KUKA Roboter Austria GmbH Organisation Tschechien und Slowakei Sezemická 2757/2 193 00 Praha Horní Počernice Czech Republic Tel. +420 22 62 12 27 2 Fax +420 22 62 12 27 0 support@kuka.cz

Hungary KUKA Robotics Hungaria Kft.
Fö út 140
2335 Taksony
Hungary
Tel. +36 24 501609
Fax +36 24 477031
info@kuka-robotics.hu

USA KUKA Robotics Corporation
51870 Shelby Parkway
Shelby Township
48315-1787
Michigan
USA
Tel. +1 866 873-5852
Fax +1 866 329-5852
info@kukarobotics.com
www.kukarobotics.com

UK KUKA Robotics UK Ltd
Great Western Street
Wednesbury West Midlands
WS10 7LL
UK
Tel. +44 121 505 9970
Fax +44 121 505 6589
service@kuka-robotics.co.uk
www.kuka-robotics.co.uk

Index

Numbers

2006/42/EC 42

2014/68/EU 42

95/16/EC 42

A

Accessories 9, 31

Angle of rotation 22

ANSI/RIA R.15.06-2012 42

Applied norms and regulations 42

Automatic mode 40

Axis data, KR 3 R540 12

Axis limitation, mechanical 35

Axis range 33

B

Basic data, KR 3 R540 11

Brake defect 37

Brake release device 36

Braking distance 33

C

CE mark 32

Cleaning work 41

Connecting cables 9, 11, 31, 49

Counterbalancing system 41

Customer interfaces 50

D

Danger zone 33

Declaration of conformity 32

Declaration of incorporation 31, 32

Decommissioning 42

Description, manipulator 9

Disposal 42

Documentation, industrial robot 5

E

EC declaration of conformity 32

Electromagnetic compatibility (EMC) 42

EMC Directive 32

EN 60204-1 + A1 43

EN 61000-6-2 42

EN 61000-6-4 + A1 42

EN 614-1 + A1 42

EN ISO 10218-1 42

EN ISO 12100 42

EN ISO 13849-1 42

EN ISO 13849-2 42

EN ISO 13850 42

Extension 22

External axes 31, 33

F

Faults 37

Foundation loads, KR 3 R540 17

Function test 39

G

General information 22

General safety measures 36

H

Handling equipment 54

Hazardous substances 41

I

In-line wrist 16

Industrial robot 31

Intended use 32

Interface A1 50

Interfaces 49

Introduction 5

K

KCP 23, 33, 37

Keyboard, external 37

KL 5

KUKA Customer Support 57

KUKA smartPAD 33

L

Labeling 36

Liability 31

Linear unit 31

Low Voltage Directive 32

M

Machine frame mounting 47

Machinery Directive 32, 42

main axes 22

Maintenance 40

Manipulator 9, 31, 33

Manual mode 39

Mechanical end stops 35

MEMD 5

micro RDC 6

Mounting base 45

Mouse, external 37

O

Operator 33, 34

Options 9, 31

Overload 37

Overview of the robot system 9

P

Payload diagram 15

Payloads, KR 3 R540 14

Personnel 33

Planning 45

Plant integrator 33

Plates and labels 19

Positioner 31

Pressure Equipment Directive 41, 42

Preventive maintenance work 41

Product description 9
Program override, motion velocity 22
Protective equipment, overview 35
Purpose 7

R

Reaction distance 33
Recommissioning 38
Release device 36
Repair 40
Robot controller 9, 31

S

Safety 31
Safety instructions 5
Safety of machinery 42, 43
Safety zone 33, 34
Safety, general 31
Service life 33
Service, KUKA Roboter GmbH 57
smartPAD 6, 9, 23, 33, 37
Software 9, 31
Start-up 38
STOP 0 22, 33
STOP 1 22, 33
STOP 2 33
Stop category 0 33
Stop category 1 33
Stop category 2 33
Stop signal 22
Stopping distance 22, 33
Stopping distances 22, 23
Stopping time 22
Stopping times 22, 23
Storage 42
Supplementary load 19
Support request 57
System integrator 32, 33, 34

T

T1 33
T2 33
Teach pendant 9, 31
Technical data 11
Technical data, KR 3 R540 11
Terms used 5, 22
Terms used, safety 33
Training 7
Transport position 53
Transportation 38, 53
Turn-tilt table 31

U

Use, contrary to intended use 31
Use, improper 31
User 33, 34
Users 7

W

Warnings 5
Workspace 12, 33, 34

